



## Преобразователь сигнала SINEAX VB604s

Архангельск (8182)63-90-72  
 Астана (7172)727-132  
 Астрахань (8512)99-46-04  
 Барнаул (3852)73-04-60  
 Белгород (4722)40-23-64  
 Брянск (4832)59-03-52  
 Владивосток (423)249-28-31  
 Волгоград (844)278-03-48  
 Вологда (8172)26-41-59  
 Воронеж (473)204-51-73  
 Екатеринбург (343)384-55-89  
 Иваново (4932)77-34-06  
 Ижевск (3412)26-03-58  
 Казань (843)206-01-48

Калининград (4012)72-03-81  
 Калуга (4842)92-23-67  
 Кемерово (3842)65-04-62  
 Киров (8332)68-02-04  
 Краснодар (861)203-40-90  
 Красноярск (391)204-63-61  
 Курск (4712)77-13-04  
 Липецк (4742)52-20-81  
 Магнитогорск (3519)55-03-13  
 Москва (495)268-04-70  
 Мурманск (8152)59-64-93  
 Набережные Челны (8552)20-53-41  
 Нижний Новгород (831)429-08-12  
 Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73  
 Омск (3812)21-46-40  
 Орел (4862)44-53-42  
 Оренбург (3532)37-68-04  
 Пенза (8412)22-31-16  
 Пермь (342)205-81-47  
 Ростов-на-Дону (863)308-18-15  
 Рязань (4912)46-61-64  
 Самара (846)206-03-16  
 Санкт-Петербург (812)309-46-40  
 Саратов (845)249-38-78  
 Севастополь (8692)22-31-93  
 Симферополь (3652)67-13-56  
 Смоленск (4812)29-41-54

Сочи (862)225-72-31  
 Ставрополь (8652)20-65-13  
 Сургут (3462)77-98-35  
 Тверь (4822)63-31-35  
 Томск (3822)98-41-53  
 Тула (4872)74-02-29  
 Тюмень (3452)66-21-18  
 Ульяновск (8422)24-23-59  
 Уфа (347)229-48-12  
 Хабаровск (4212)92-98-04  
 Челябинск (351)202-03-61  
 Череповец (8202)49-02-64  
 Ярославль (4852)69-52-93

Единый адрес для всех регионов: [cmn@nt-rt.ru](mailto:cmn@nt-rt.ru) || [www.camille-bauer.nt-rt.ru](http://www.camille-bauer.nt-rt.ru)

использовано с разрешения официального  
дистрибутора АО «ЮЕ-Интернейшнл»

# Operating instructions

## SINEAX VB604s

### Programmable multifunctional transmitter with REMOTE I/O functionality.

#### First read, then ...



The unobjectionable and safe operation presupposes that these operating instructions have been read and understood!



Devices may only be disposed of in a professional manner!

#### Contents

1. Functional description .....	2
2. Connection to a PC and communication via CB-Manager .....	3
3. Block diagram.....	4
4. Technical data.....	4
5. Signal flow .....	8
6. Modbus interface.....	12
6.1 EIA-RS-485 Standard.....	12
6.2 Coding and addressing.....	12
6.3 Mapping .....	13
6.4 Device identification .....	13
6.5 Measured values .....	14
6.6 Configuration parameters .....	16
7. Electric connections .....	23
8. Dimensional drawing .....	25
9. Accessories .....	25
10. Conformity declaration .....	25

## 1. Functional description

VB604s is a multifunctional transmitter for top-hat rail assembly with the following main characteristics:

- Measurement of DC voltage, DC current, temperature (RTD, TC) and resistance
- Programmable remote I/O functionality. Readout of all input variables and internally calculated values via MODBUS. Simultaneously, the outputs and the relay may be controlled via MODBUS.
- Free selection as to whether the output variables are dependent on the input variables or whether the outputs are controlled independently of the inputs via MODBUS.
- Sensor connection without any external jumpers
- 2 inputs (e.g. for sensor redundancy or difference formation)
- 2 outputs (U and/or I)
- 2 inputs can be linked with each other and allocated to the 2 outputs which enables calculations and sensor monitoring (e.g. prognostic maintenance of sensors)
- System capability: Communication via Modbus interface
- Freely programmable relay, e.g. for limit or alarm signalling
- AC/DC wide-range power supply unit
- Pluggable high-quality screw or spring cage terminals

All settings of the instrument can be adapted to the measuring task by PC software. The software also serves visualising, commissioning and service.

A distinctive feature of SINEAX VB604s is constituted by the fact that, apart from the full functional range of a multifunctional signal converter, it can also be used as a small remote I/O system.

In SINEAX VB604s, the signal flow may be controlled in such a way that the input signal or the measured variable is not inevitably routed to the output. However, the values can be communicated via MODBUS.


In this operating mode, the outputs as well as the relay may also be controlled via MODBUS.

Whether this remote functionality is applicable to both or only to one channel can be freely selected. If only one channel is selected, the second one behaves like a normal signal converter.

## 2. Connection of SINEAX VB604s to a PC and communication via CB-Manager.

VB604s communicates with a PC (CB-Manager) via an RS 232/RS485 interface and a MODBUS protocol.


Select the following settings in this respect:

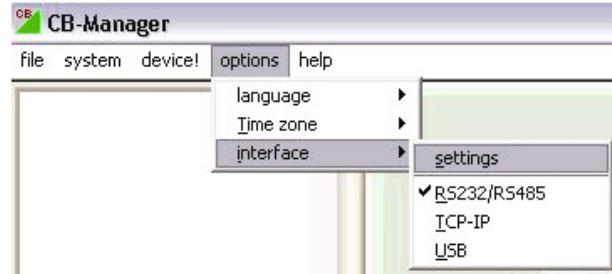

Select the RS 232/ RS485 interface under Options / Interface.

This is also applicable if an RS485/USB converter is used and the converter is connected to the computer via the USB connection.

Subsequently, enter the following settings under Options / Interface / Settings:

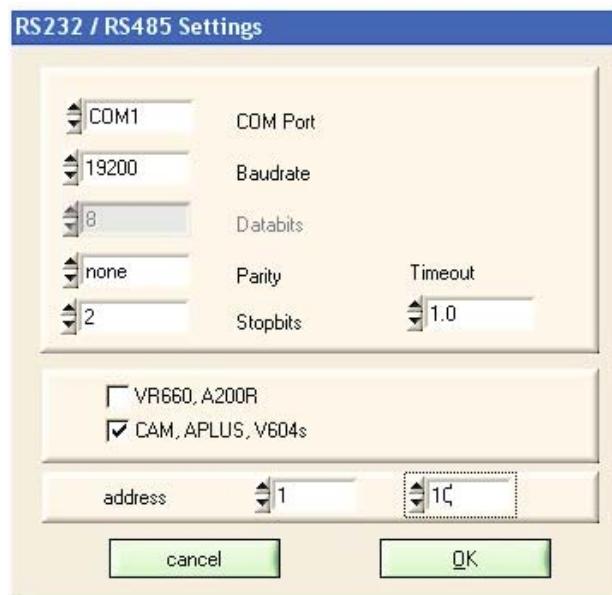


The existing COM ports are determined as the communication interface when starting the program and selecting RS232/RS485. Only COM ports found are available for selection.

Limiting the range of possible device addresses speeds up the search of connected devices considerably.

Example: If only 2 devices are connected, it makes sense to select the address range from 1 to 2.

All settings are stored as the program is terminated. If the COM port is not available upon the next start of the program (e.g. because the converter has not been plugged in) another valid interface is set.

To determine which COM port has been allocated to the RS485 converter (if required), please proceed as follows:

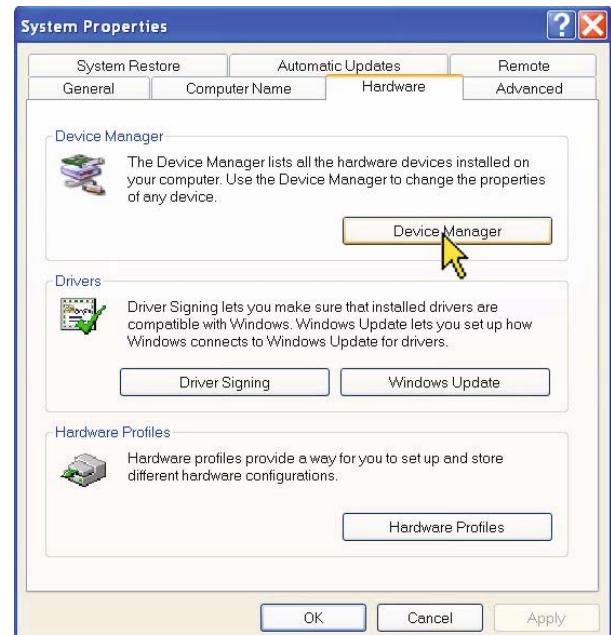

The COM port of an external RS232 or RS485 converter may be determined (and, if required, changed) via the Windows system control.


Example for Windows XP: **System control => System**




This example shows the COM ports of a PCMCIA card and a USB-RS232 converter:

- Silicom Serial Card: COM1
- USB-RS232 adapter: COM4

If you use the Camille Bauer USB-RS485 converter (Article Number 163189), the same is to be connected as follows:

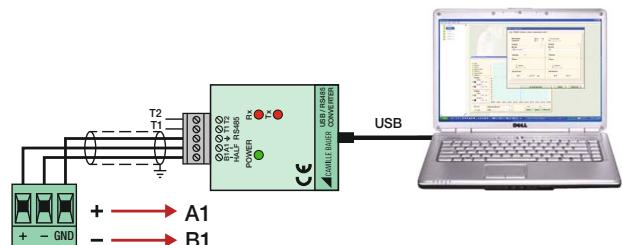

### 3. Block diagram

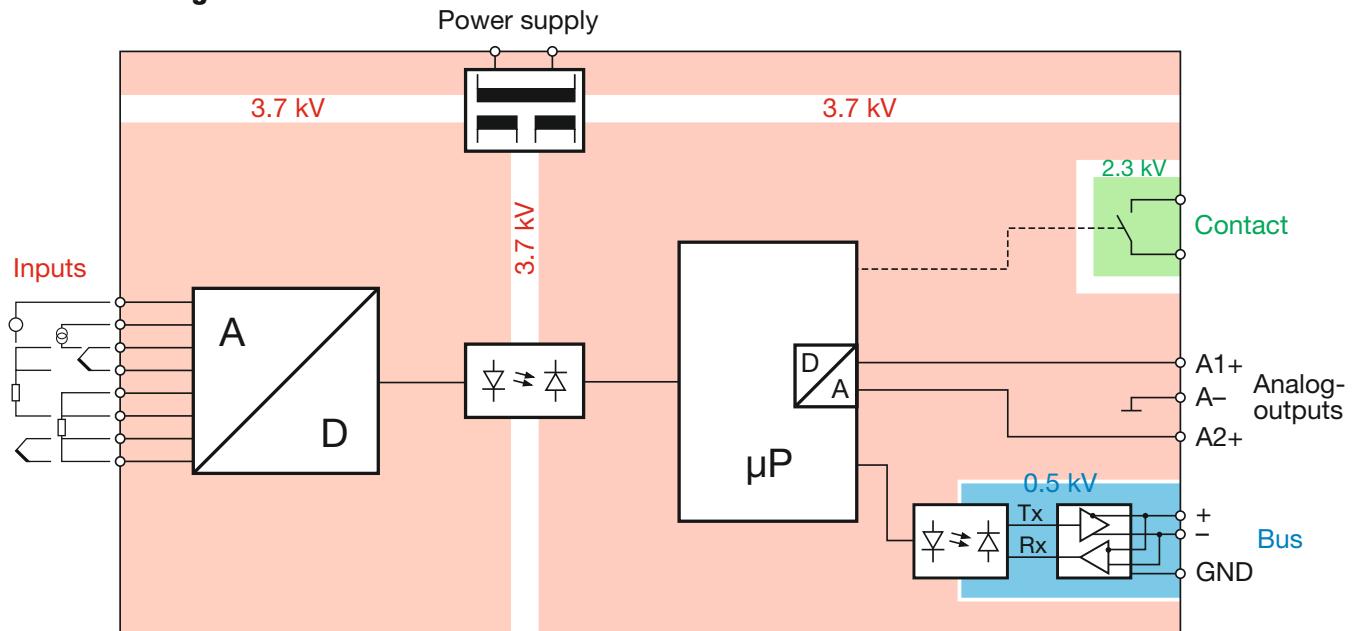

### 4. Technical data

**Table 1: Input variables, measuring ranges**

Measurement type	Measuring range	Minimum span
DC voltage [mV]	-1000 ... 1000 mV	2 mV
DC current [mA]	-50 ... 50 mA	0,2 mA
Resistance [ $\Omega$ ]	0 ... 5000 $\Omega$	8 $\Omega$
RTD Pt100	-200 ... 850 °C	20 K
RTD Ni100	-60 ... 250 °C	15 K
TC Type B	0 ... 1820 °C	635 K
TC Type E	-270 ... 1000 °C	34 K
TC Type J	-210 ... 1200 °C	39 K
TC Type K	-270 ... 1372 °C	50 K
TC Type L	-200 ... 900 °C	38 K
TC Type N	-270 ... 1300 °C	74 K
TC Type R	-50 ... 1768 °C	259 K
TC Type S	-50 ... 1768 °C	265 K
TC Type T	-270 ... 400 °C	50 K
TC Type U	-200 ... 600 °C	49 K
TC Type W5Re-26Re	0 ... 2315 °C	135 K
TC Type W3Re-25Re	0 ... 2315 °C	161 K

#### Measuring input 1 →

##### Direct voltage

Measuring range mV      For limits see Table 1  
 $R_i > 10 \text{ M}\Omega$ , continuous,  
 overload max.  $\pm 1200 \text{ mV}$

##### Direct current

Measuring range mA      For limits see Table 1  
 $R_i = 11 \text{ }\Omega$ , continuous,  
 overload max.  $\pm 50 \text{ mA}$

#### Resistance thermometer RTD

Resistance measurement types	Pt100 (IEC 60751), adjustable Pt20...Pt1000 Ni100 (DIN 43760), adjustable Ni50...Ni1000
Measuring range limits	See Table 1
Wiring	2, 3 or 4-wire connection
Measuring current	0.2 mA
Line resistance	30 $\Omega$ per line, in 2-wire connection adjustable or calibratable

#### Thermocouples TC

Thermocouples	Type B, E, J, K, N, R, S, T (IEC 60584-1) Type L, U (DIN 43760) Type W5Re-W26Re, W3Re-W25Re (ASTM E988-90)
Measuring range limits	See Table 1

Cold junction compensation	Internal (with installed Pt100), with Pt100 on terminals or external with reference junction -20...70 °C
----------------------------	---

#### Resistance measurement, teletransmitter, potentiometer

Measuring range limits	See Table 1
Wiring	2, 3 or 4-wire connection
Resistance teletransm.	Type WF and WF DIN
Measuring current	0.2 mA
Line resistance	30 $\Omega$ per line, in 2-wire connection adjustable or calibratable

#### Measuring input 2 →

##### Direct current

Measuring range mA      Same as Measuring input 1

<b>Direct voltage</b>	Transmission functions	Linear, Absolute amount, scaling (gain/ offset), magnifier function (zoom)
Measuring range mV      Same as Measuring input 1		user-specific via basic value table (24 basic values per measured variable)
<b>Resistance thermometer RTD</b>	Settling time:	Adjustable 1...30 s
Same as Measuring input 1 except: Wiring                          2 or 3-wire connection		
<b>Thermocouples TC</b>		
Same as Measuring input 1		
<b>Resistance measurement, teletransmitter, potentiometer</b>		
Same as Measuring input 1 except: Wiring                          2 or 3-wire connection		
	Measuring inputs 1 and 2 are galvanically connected. If 2 input sensors or input variables are used, observe combination options in Table 3 (page 24) and circuit instructions (page 23)!	
<b>Analog outputs 1 and 2</b>		
The two outputs are galvanically connected and have a common earth. Voltage and current output software-configurable.		
<b>Direct current</b>		
Output range $\pm 20 \text{ mA}$ , range may be freely set		
Burden voltage             max. 12 V		
Open circuit voltage      < 20 V		
Limit                        Adjustable, max. $\pm 22 \text{ mA}$		
Residual ripple            <1% pp related to 20 mA		
<b>Direct Voltage</b>		
Output range $\pm 10 \text{ V}$ , range may be freely set		
Load                        max. 20 mA		
Current limit              Approx. 30 mA		
Limit                        Adjustable, max. $\pm 11 \text{ V}$		
Residual ripple            <1% pp related to 10 V		
<b>Output settings</b>		
Limit		
Gain/offset trimming		
Inversion		
<b>Relay contact output</b>		
Contact                    1 pole, normally open contact (NO)		
Switching capacity        AC: 2 A / 250 V DC: 2 A / 30 V		
<b>Bus/programming connection</b>		
Interface, protocol      RS-485, Modbus RTU		
Baudrate                   9,6...115,2 kBaud, adjustable		
<b>Transmission behaviour</b>		
Measured variables for the outputs	<ul style="list-style-type: none"> <li>• Input 1</li> <li>• Input 2</li> <li>• Input 1 + Input 2</li> <li>• Input 1 – Input 2</li> <li>• Input 2 – Input 1</li> <li>• Input 1 · Input 2</li> <li>• Minimum value, maximum value or mean value of Input 1 and Input 2</li> <li>• Sensor redundancy Input 1 or Input 2</li> </ul>	
<b>Limit values and monitoring</b>		
Number of limit values	2	
Measured variables for limit values		<ul style="list-style-type: none"> <li>• Input 1</li> <li>• Input 2</li> <li>• Measured variable for outputs</li> <li>• Input 1 – Input 2 (e.g. drift monitoring in case of 2 sensors)</li> <li>• Input 2 – Input 1 (e.g. drift monitoring in case of 2 sensors)</li> <li>• Meter 1</li> </ul>
Functions	Absolute amount Gradient dx/dt (e.g. temperature gradient monitoring)	
Time delay	Adjustable 0...3600 s	
Signaling	Relay contact, alarm LED, Status 1	
<b>Meter</b>		
Number	1	
Meter source	Measured variables for outputs 1 or 2	
Settings	Mode (pos., neg.), unit (prefix, s/min/h), meter reset / set	
<b>Sensor breakage and short circuit monitoring measuring input</b>		
Signalling	Relay contact, alarm LED, Status 1	
	Output value in case of a fault	
Signalling to alarm LED	In case of a sensor error, the defective input (1 or 2) is signalled by the number of flashes of the alarm LED (1x or 2x). In case of a failure at both inputs: Alarm LED does not flash.	
<b>Other monitoring operations</b>		
Drift monitoring	Monitoring of measured value between 2 input sensors for a certain period of time (e.g. due to different sensor response times). If this time is exceeded, an alarm is signalled. (See Limit values 1 and 2)	
Sensor redundancy	Measurement with 2 temperature sensors; if Sensor 1 fails (fault) Sensor 2 is activated for bridging (see measuring variable for outputs).	

## Alarm signalling

Relay contact	With closed contact, the yellow LED shines, invertible alarmfunction	TC W5Re-W26Re, W3Re-W25Re	$\pm 0.1\%$ $\pm 2.0$ K
Alarm LED	Adjustable 0...60s	DC voltage mV	$\pm 0.1\%$ $\pm 0.015$ mV
Output value in case of a fault	For sensor breakage and short circuit, value adjustable -10... 110%	DC voltage V	$\pm 0.1\%$ $\pm 0.0045$ V
		DC current mA	$\pm 0.1\%$ $\pm 0.0015$ mA

## Power supply

Rated voltage UN	Tolerance
24...230 V DC *	$\pm 15\%$
100...230 V AC, 45...400 Hz	$\pm 15\%$

\* In case of a power supply voltage >125 V DC, the power supply circuit must contain an external fuse.

Power consumption      <3 W or 7 VA

## Displays at the instrument

LED	Color	Function
ON	green	Power on
	green flashing	Communication activ
ERR	red	Alarm
—	yellow	Relay on

## Configuration, programming

Operation with PC software «CB-Manager»

## Accuracies (according to EN/IEC 60770-1)

### Reference conditions

Ambient temperature	23 °C $\pm 2$ K
Power supply	24 V DC
Reference value	Span
Settings	Input 1: Direct voltage mV, 0...1000 mV Output 1: 4...20 mA, burden resistance 300 $\Omega$ Mains frequency 50 Hz, Setting time 1 s Input 2, output 2, relay, monitoring off or not active, for voltage output: range 0...10 V, burden resistance 2 k $\Omega$
Installation position	Vertically, detached

### Basic accuracy

At reference conditions     $\pm 0.1\%$

*Other types of measurement and input ranges:*

RTD Pt100, Ni100	$\pm 0.1\%$ $\pm 0.2$ K
Resistance measurement	$\pm 0.1\%$ $\pm 0.1$ $\Omega$
TC Type K, E, J, T, N, L, U	$\pm 0.1\%$ $\pm 0.4$ K, measurement value > -100 °C
TC Type R, S	$\pm 0.1\%$ $\pm 2.4$ K
TC Type B	$\pm 0.1\%$ $\pm 2.4$ K, measurement value > 300°C

### Additional error (additive)

High range minimum value (Minimum value >40% of maximum value):	$\pm 0.1\%$ of maximum value
Small output range	$\pm 0.1\%$ * (reference range / new range)
Cold junction compensation internal	$\pm 3$ K
Magnifier function	$\pm$ Zoom factor x (basic accuracy + additional error) Zoom factor = measured variable range / zoom range

### Influencing factors

Ambient temperature	$\pm 0.1\%$ per 10 K at reference con- ditions other settings: basic accuracy and additional errors per 10 K
Long-term drift	$\pm 0.1\%$
Common mode/ series mode influence	$\pm 0.2\%$

### Ambient conditions

Operating temperature	-25 ... +55 °C
Storage temperature	-40 ... +70 °C
Relative humidity	$\leq 75\%$ , no condensation
Range of utilisation	Internal room up to 2000m above sea level

### Installation details


Design	Top-hat rail housing U4 Combustibility class V-0 according to UL 94
Dimensions	See dimensional drawing
Assembly	For snap-on fastening on top-hat rail (35 x 15 mm or 35 x 7.5 mm) according to EN 50022
Terminals	Pluggable, 2.5 mm <sup>2</sup>
Weight	Front plug spring terminal 1.5mm <sup>2</sup> 0.14 kg

### Product safety, regulations

Electromagnetic compatibility	EN 61000-6-2 / 61000-6-4
Ingress protection (acc. IEC 529 or EN 60529)	Housing IP 40 terminal IP20
Electric design	Acc. IEC or EN 61010
Degree of pollution	2
Between power supply and all circuits	Reinforced insulation overvoltage category III Working voltage 300 V Test voltage 3.7 kV AC rms

Between the measuring input (1+2) and all circuits	Reinforced insulation overvoltage category III operating voltage 300 V overvoltage category II operating voltage 600 V test voltage 3.7 kV AC rms
Between output (1 + 2) and relay contact	Reinforced insulation overvoltage category II Working voltage 300 V Test voltage 2.3 kV AC rms
Between output (1 + 2) and the bus connection	Functional insulation Working voltage <50 V Test voltage 0.5 kV AC rms
Environmental tests	EN 60068-2-1/-2/-3 EN 60068-2-27 Shock: 50g, 11ms, sawtooth, half-sine EN 60068-2-6 Vibration: 0.15mm/2g, 10...150Hz, 10 cycles

### Type label

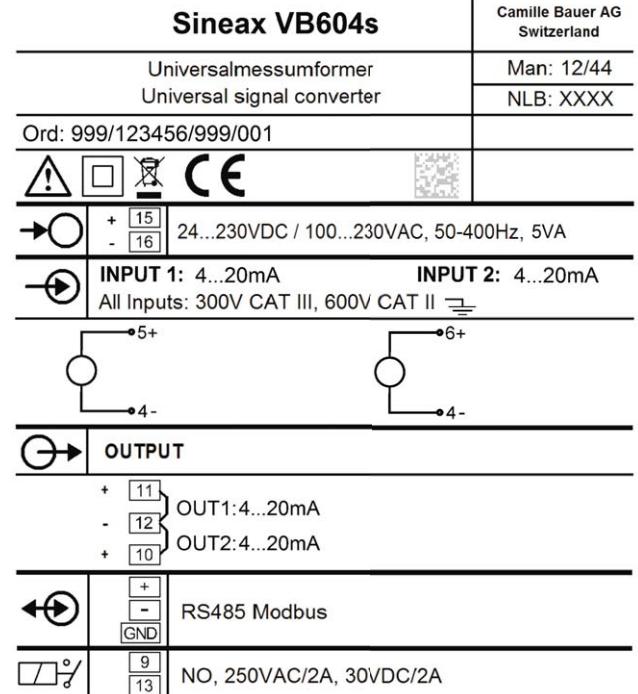


### Explanation of symbols on the type label

Symbol	Meaning
	Double insulation, device of protection class 2
	CE conformity mark. The device fulfills the requirements of the applicable EG directives
	Caution! General hazard point. Read the operating instructions.
	The instruments must be only be disposed of in the correct way!
	General symbol: Input
	General symbol: Output
	General symbol: Power supply
	General symbol: Communication
	General symbol: Relay


## 5. Signal flow

The following diagram shows the VB604s signal flow. All relevant measured variables and parameters determining the signal flow are represented.


### Overview signal flow

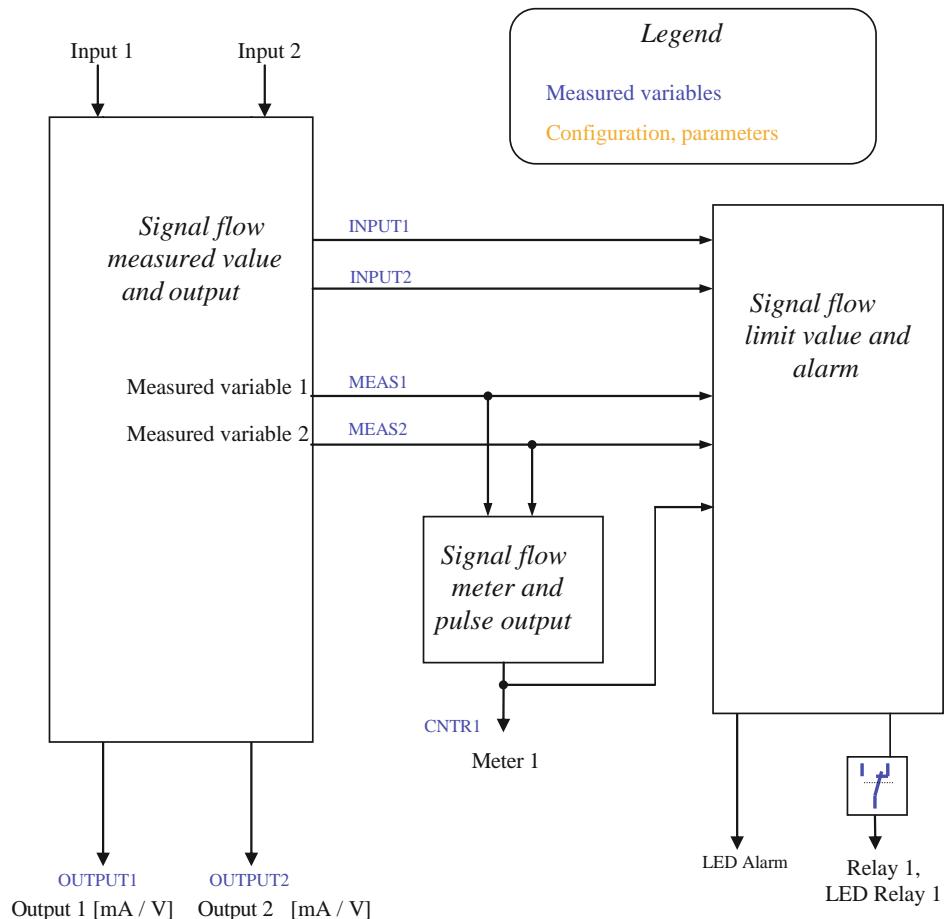


## Signal flow measured value and output

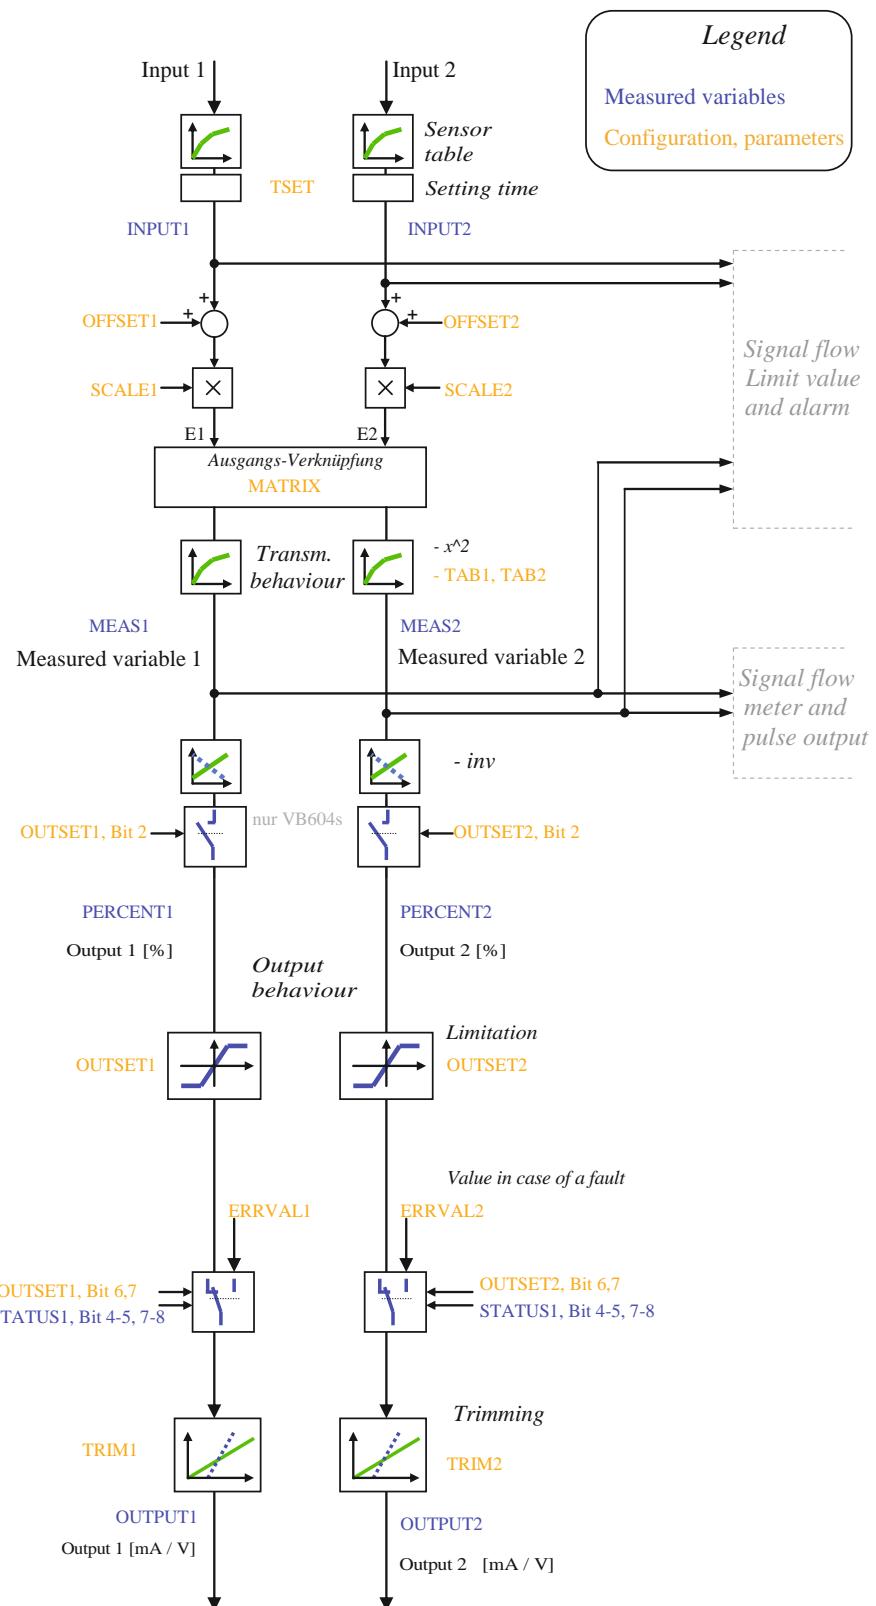

## Signal flow limit value and alarm

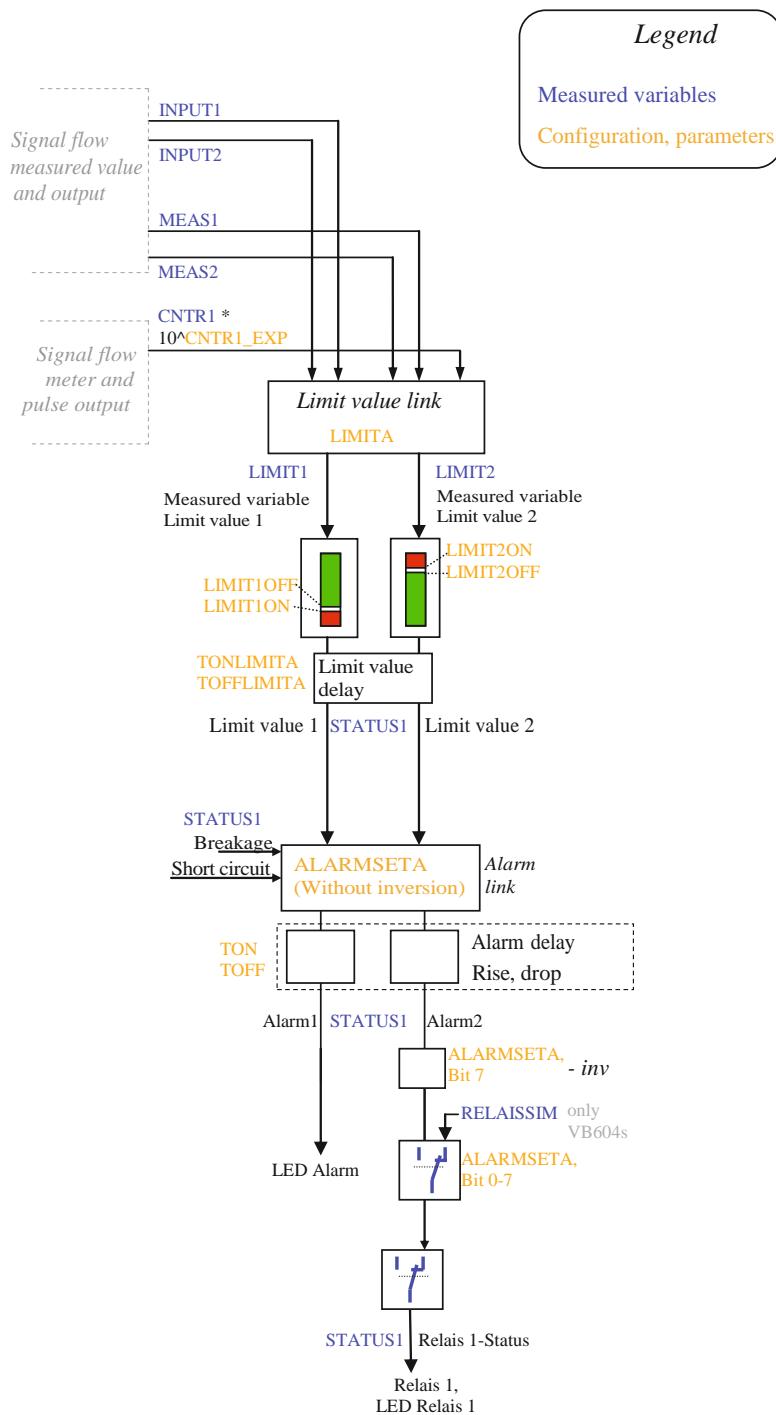

## Signal flow meter and pulse output

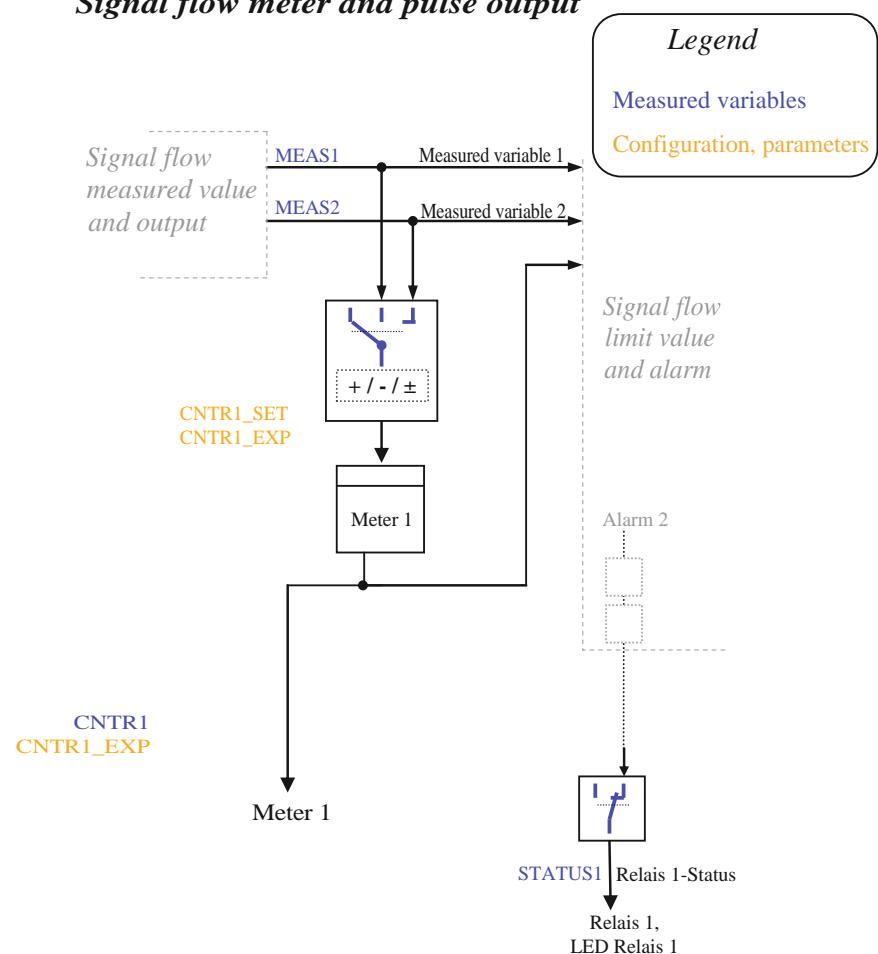

## 6. Modbus interface

### 6.1 EIA-RS-485 Standard


The EIA-RS-485 standard defines the physical layer of the Modbus interface.

#### Coding


The data is transmitted in serial form via the 2-wire bus. The information is coded as a difference signal in the NRZ code. Positive polarity signals a logic 1, negative polarity signals the logic 0.

#### Connections

A shielded, twisted, 2-conductor cable should be used as a bus cable. Shielding serves improved electromagnetic compatibility (EMC). Depending on the source of information, the description of Conductor A and B is contradictory.


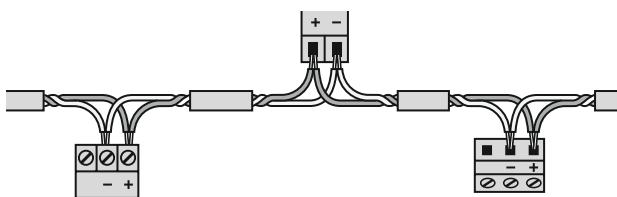


The potential difference of all bus participants may not exceed  $\pm 7V$ . Therefore, the use of a shield or a third conductor (ref line) is recommended to create potential equalisation.

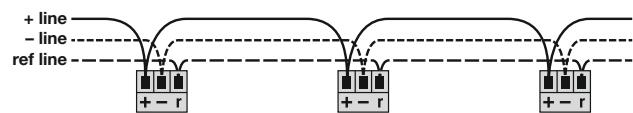


#### Topology

Both ends of the bus cable must be equipped with a line terminator. Supplementing the line termination resistance  $R_T$  of the EIA-RS-485 standard an additional resistance  $R_U$  (pull-up) must be wired against the supply voltage and a resistance  $R_D$  (pulldown) against the reference potential. These two resistances ensure a defined idle potential on the line when none of the participants is sending.

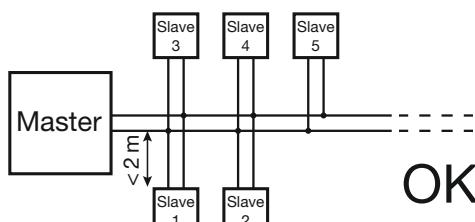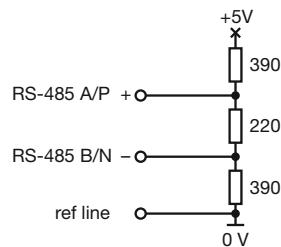

OK

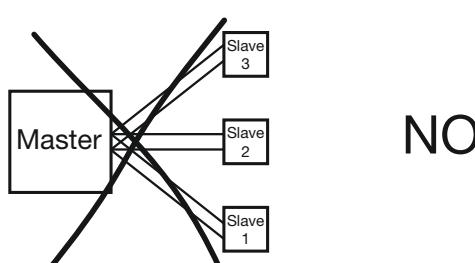

NO

### System requirements

Cable:	Twisted, 2-wire line, wave resistance 100 to 130 $\Omega$ , min. 0.22mm <sup>2</sup> (24AWG)
Line length:	Maximum 1'200m depending on the transmission rate
Participants:	Maximum 32 per segment
Rate:	9'600, 14'400, 19'200, 38'400, 56'000, 57'600, 115'200 Baud
Mode:	11 bit format - 2 stop bit without parity or 1 stop bit with even/uneven parity

### 6.2 Coding and addressing

#### Addressing

In the telegram, all data addresses refer to zero. The first data element is always addressed via the 0 address. For example, the coil which is known as "Coil 1" in the device, is addressed as "Coil 0" in the telegram. Coil 127 is addressed as 0x007E.

Holding register 40001 is addressed as Register 0 in the telegram. The function code of the telegram already states that a "holding register" is concerned. Consequently, the reference to "4XXXX" is implicit.

Holding register 40108 is addressed as 0x006B (107 decimal).

#### Serialisation

The specification defines the telegrams as byte sequences. The respective physical layer (RS485, Ethernet) is responsible for the correct serialisation of the bytes (MSB or LSB First). RS485 (UART, COM) transmits the "Least Significant Bit" first (LSB First) and adds the synchronisation and backup bits (start bit, parity bit and stop bit).

Start	1	2	3	4	5	6	7	8	Par	Stop
-------	---	---	---	---	---	---	---	---	-----	------

#### Bits

Bits are represented within a byte in a conventional manner with the MSB (Bit 7) leftmost and the LSB (Bit 0) rightmost (0101'1010 = 0x5A = 90). An example for the inquiry of Coils 20 to 40 of Slaves 17.

Byte	Inquiry		Response	
	Slave address	0x11	Slave address	0x11
0	Function code	0x01	Function code	0x01
1	Start address	0x00	Byte count	0x03
2	19 = Coil 20	0x13	Byte 0	0xCD
3	Number	0x00	Byte 1	0x6B
4	20...40 = 21	0x15	Byte 2	0x01

The start address in the inquiry plus the bit position in response byte 0 corresponds to the coil address. Commenced bytes are completed with zeros. Coil 27...20 = 0xCD = 11001101b  
→ Coil20 = ON, Coil21 = OFF, Coil22 = ON, etc.

Bytes

Modbus does not know a byte or character data type (see address space). Strings or byte arrays are mapped in "holding registers" (2 characters per register) and transmitted as a "character stream", e.g. "Hello World".


<b>Register</b>	<b>HEX</b>	<b>char</b>	<b>Register</b>	<b>HEX</b>	<b>char</b>
40101	0x4865	,H' ,e'	40104	0x576F	,W' ,o'
40102	0x6C6C	,l' ,l'	40105	0x726C	,r' ,l'
40103	0x6F5F	,o' ,_'	40106	0x6400	,d'

## Words

**Registers**  
Registers or words are transmitted according to specification in "Big Endian" format, e.g. Read Holding Register 40101 of Slave 17.

Real

Modbus does not know any data types to represent floating point numbers. On principle, any data structures may be mapped on the 16Bit register ("cast"). The IEEE 754 standard is the most used standard to represent floating point numbers.

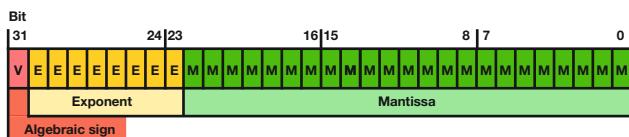

The first register contains Bits 15 – 0 of the 32-bit number (bit 0...15 of the mantissa).

The second register contains Bits 16 – 32 of the 32-bit number (algebraic sign, exponent and Bit 16- 22 of the mantissa).

## 6.3 Mapping

### Address space

The address space may be divided into 4 address spaces according to the 4 types of data.

<b>Space</b>	<b>r/w</b>	<b>Address area</b>	<b>Function code</b>	
Coil	Readable Writable	00001 - 09999	0x01 0x05 0x0F	Read Coil Status <sup>1)</sup> Force Single Coil <sup>1)</sup> Force Multiple Coils <sup>1)</sup>
Discrete input	Only readable	10001 - 19999	0x02	Read Input Status <sup>1)</sup>
Input register	Only readable	30001 - 39999	0x04	Read Input Register <sup>1)</sup>
Holding register	Readable Writable	40001 - 49999	0x03 0x06 0x10	Read Holding Registers Force Single Register <sup>1)</sup> Preset Multiple Registers

<sup>1)</sup> not implemented

To reduce the commands, the device image was represented as far as possible in "holding registers".

## Segments

Address	Description	Permitted function codes	
40209 - 40210	Actions		
40257 - 40290	Measured values, status	0x03	Read Holding Registers
40400 - 40402	Meter	0x10	Preset Multiple Registers
40515 - 40516	Settings (Modbus)		
40517 - 40792	Configuration data		
41076	Device type	0x03	Read Holding Registers

## Syntax

<b>Address</b>	Start address of the described data block (register, coil or input status)
<b>Description</b>	Unique variable or structure description
<b>Data type</b>	Data type of variable (U: unsigned, INT: integer, 8/16/32 bit, REAL or CHAR[..])
#	Offset from the start address in the data type unit, for Byte 0: Low, 1: High byte
<b>Default</b>	Value upon delivery or after a hardware reset
<b>Description</b>	Exact details concerning the variable described

#### **6.4 Device identification**

The device is identified by "Read Slave ID".

## Function 11h: Report Slave ID

### Master telegram:

Device address	Function	CRC	
ADDR	0x11	LO	HI

Slave telegram:

Device Address	Function	Number data bytes	Slave ID	Sub ID	Data 2	CRC	
ADDR	0x11	3				LO	HI

<b>Device ID</b>	<b>Sub-ID</b>	<b>Device</b>	<b>Description</b>
0x01	0x00	VR660	Temperature controller
0x02	0x00	A200R	Display
0x03	0x01	CAM	Universal measuring unit for heavy current variables
0x04	0x00	APLUS	Multifunctional display
0x05	0x00	V604s	Universal transmitter
0x05	0x01	VB604s	Universal transmitter multi in/out
0x05	0x02	VC604s	Universal transmitter second relay
0x05	0x03	VQ604s	Universal transmitter fast setting time

## Device information

Adress	Description	Data type	Description										
41076	DEVICE	UINT16	Device type <table> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0-1</td> <td>Reserved</td> </tr> <tr> <td>2</td> <td>0: V / mA inputs</td> </tr> <tr> <td></td> <td>1: 2 x mA inputs</td> </tr> <tr> <td>3-15</td> <td>Reserved</td> </tr> </tbody> </table>	Bit	Description	0-1	Reserved	2	0: V / mA inputs		1: 2 x mA inputs	3-15	Reserved
Bit	Description												
0-1	Reserved												
2	0: V / mA inputs												
	1: 2 x mA inputs												
3-15	Reserved												

## 6.5 Measured values

### Triggering action

Address	Description	Data type	#	Default	Description						
40209	ACTION	UINT16		0	<p>This register starts actions.</p> <table> <thead> <tr> <th>Action</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>18</td> <td>Input 1: With short-circuited input terminals, the line calibration is realised and the measured parameters are stored in the device. This procedure is indicated by a flashing green LED.</td> </tr> <tr> <td>19</td> <td>Line calibration at Input 2 (same as Input 1)</td> </tr> </tbody> </table>	Action	Description	18	Input 1: With short-circuited input terminals, the line calibration is realised and the measured parameters are stored in the device. This procedure is indicated by a flashing green LED.	19	Line calibration at Input 2 (same as Input 1)
Action	Description										
18	Input 1: With short-circuited input terminals, the line calibration is realised and the measured parameters are stored in the device. This procedure is indicated by a flashing green LED.										
19	Line calibration at Input 2 (same as Input 1)										
40210	ACTDAT				Additional information for the implementation of an action.						

### Simulation of output variables

- Writing into the PERCENT1, PERCENT2, OUTPUT1, OUTPUT2 registers interrupts the signal flow to the respective variable and the desired value is specified (However, percent and output value cannot be simulated simultaneously). The status of the simulation mode can be read in the STATUS2 status register.
- The simulation mode is terminated by writing 0 into the respective bits in the STATUS2 register.
- VB604s:
  - After a change of the configuration parameters, the desired value must be specified again.
  - A relay parameter can be specified by writing into the RELAISIM register (only if ALARMSET for relay = 00h).

### Current measured variables

Address	Description	Data type	#	Default	Description																																						
40257	STATUS1	UINT16		0	<p>Status 1</p> <table> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Reserved</td> </tr> <tr> <td>1</td> <td>Reserved</td> </tr> <tr> <td>2</td> <td>Device fault</td> </tr> <tr> <td>3</td> <td>Parameter fault</td> </tr> <tr> <td>4</td> <td>Sensor breakage</td> <td>Input 1</td> </tr> <tr> <td>5</td> <td>Sensor short circuit</td> <td>Input 1</td> </tr> <tr> <td>6</td> <td>Reserved</td> </tr> <tr> <td>7</td> <td>Sensor breakage</td> <td>Input 2</td> </tr> <tr> <td>8</td> <td>Sensor short circuit</td> <td>Input 2</td> </tr> <tr> <td>9</td> <td>Reserved</td> </tr> <tr> <td>10</td> <td>Alarm 1</td> </tr> <tr> <td>11</td> <td>Alarm 2 (relay 1 status before inverting)</td> </tr> <tr> <td>12</td> <td>Limit value 1</td> </tr> <tr> <td>13</td> <td>Limit value 2</td> </tr> <tr> <td>14</td> <td>Relay 1 status</td> </tr> <tr> <td>15</td> <td>Device reset or new parameter values</td> </tr> </tbody> </table>	Bit	Description	0	Reserved	1	Reserved	2	Device fault	3	Parameter fault	4	Sensor breakage	Input 1	5	Sensor short circuit	Input 1	6	Reserved	7	Sensor breakage	Input 2	8	Sensor short circuit	Input 2	9	Reserved	10	Alarm 1	11	Alarm 2 (relay 1 status before inverting)	12	Limit value 1	13	Limit value 2	14	Relay 1 status	15	Device reset or new parameter values
Bit	Description																																										
0	Reserved																																										
1	Reserved																																										
2	Device fault																																										
3	Parameter fault																																										
4	Sensor breakage	Input 1																																									
5	Sensor short circuit	Input 1																																									
6	Reserved																																										
7	Sensor breakage	Input 2																																									
8	Sensor short circuit	Input 2																																									
9	Reserved																																										
10	Alarm 1																																										
11	Alarm 2 (relay 1 status before inverting)																																										
12	Limit value 1																																										
13	Limit value 2																																										
14	Relay 1 status																																										
15	Device reset or new parameter values																																										
40258	STATUS2	UINT16		0	<p>Status of the simulation mode: A set bit indicates the simulation mode of the respective register.</p> <table> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Output 1 (PERCENT1)</td> </tr> <tr> <td>1</td> <td>Output 1 (OUTPUT1)</td> </tr> <tr> <td>2</td> <td>Output 2 (PERCENT2)</td> </tr> <tr> <td>3</td> <td>Output 2 (OUTPUT2)</td> </tr> </tbody> </table> <p>The simulation mode is terminated by writing zeros into the respective bit positions (0..3).</p>	Bit	Description	0	Output 1 (PERCENT1)	1	Output 1 (OUTPUT1)	2	Output 2 (PERCENT2)	3	Output 2 (OUTPUT2)																												
Bit	Description																																										
0	Output 1 (PERCENT1)																																										
1	Output 1 (OUTPUT1)																																										
2	Output 2 (PERCENT2)																																										
3	Output 2 (OUTPUT2)																																										
40259	INPUT1	REAL		0.0	Measured value Input 1																																						
40261	INPUT2	REAL		0.0	Measured value Input 2																																						
40263	MEAS1	REAL		0.0	Measured variable for Output 1																																						
40265	MEAS2	REAL		0.0	Measured variable for Output 2																																						
40267	LIMIT1	REAL		0.0	Measured variable for Limit value 1																																						
40269	LIMIT2	REAL		0.0	Measured variable for Limit value 2																																						
40271	T_JUNCTION1	REAL		0.0	Cold junction temperature Input 1																																						
40273	T_JUNCTION2	REAL		0.0	Cold junction temperature Input 2																																						
40275	ELAPSED	UINT32		0	Operation hour counter [s]																																						
40277	PERCENT1	REAL		0.0	Output 1: Scaled output variable in %																																						

40279	PERCENT2	REAL		0.0	Output 2: Scaled output variable in %				
40281	OUTPUT1	REAL		0.0	Output 1 [mA] / [V]				
40283	OUTPUT2	REAL		0.0	Output 2 [mA] / [V]				
40290	RELAISIM	UINT16		0	<p>Specify relay status</p> <table> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>0: Relay 1 deactivated, 1: Relay activated - Relay specification only possible if ALARMSET for relay = 00h</td> </tr> </tbody> </table>	Bit	Description	0	0: Relay 1 deactivated, 1: Relay activated - Relay specification only possible if ALARMSET for relay = 00h
Bit	Description								
0	0: Relay 1 deactivated, 1: Relay activated - Relay specification only possible if ALARMSET for relay = 00h								

## Meter

Address	Description	Data type	#	Default	Description
40400	CNTR1	UINT32		0	Meter 1
40402	CNTR1_EXP	INT16		0	Exponent $10^x$

- Meter value =  $CNTR1 \times 10^{CNTR1\_EXP}$
- Unit = [meter source unit] × meter time scaling [s / min / h], e.g. Wh (-> see CNTR1\_SET)
- CNTR1\_EXP composition:
  1. Meter exponent: Thousand prefix ( $\mu=-6, m=-3, -=0, k=3, M=6, G=9$ ), e.g. kW
  2. Resolution (decimals): ( $\times 1=0; \times 10: -1, \times 100: -2$ ), e.g. 1.45 kW $CNTR1\_EXP = \text{meter exponent} + \text{solution}; \text{e.g. } 6(M) + -2(\times 100) = 4$
- Example: CNTR1= 12056; CNTR1\_EXP= 4; unit meter source = Wh  
Meter value =  $12056 \times 10^4$  Wh = 120'560'000 Wh= 120.56 MWh
- Meter resetting / setting -> write value into meter register.

## 6.6 Configuration parameters

### Settings

Address	Description	Data type	#	Default	Description																																		
40515	DEVADDR	UINT16		01h	MODBUS Slave address (1...247)																																		
40516	MODBUS	UINT16		3222h	<p>MODBUS settings</p> <table> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0-2</td> <td>Baudrate</td> </tr> <tr> <td>0:</td> <td>9600</td> </tr> <tr> <td>1:</td> <td>14400</td> </tr> <tr> <td><b>2:</b></td> <td><b>19200</b></td> </tr> <tr> <td>3:</td> <td>38400</td> </tr> <tr> <td>4:</td> <td>56000</td> </tr> <tr> <td>5:</td> <td>57600</td> </tr> <tr> <td>6:</td> <td>115200</td> </tr> <tr> <td>7:</td> <td>Reserved</td> </tr> <tr> <td>3</td> <td>0: Odd parity</td> </tr> <tr> <td></td> <td>1: Even parity</td> </tr> <tr> <td>4</td> <td><b>0: Parity disabled</b></td> </tr> <tr> <td></td> <td>1: Parity enabled</td> </tr> <tr> <td>5</td> <td>0: 1 Stop bit</td> </tr> <tr> <td></td> <td><b>1: 2 Stop bits</b></td> </tr> <tr> <td>8-15</td> <td>Response delay [ms] (5..255)</td> </tr> </tbody> </table>	Bit	Description	0-2	Baudrate	0:	9600	1:	14400	<b>2:</b>	<b>19200</b>	3:	38400	4:	56000	5:	57600	6:	115200	7:	Reserved	3	0: Odd parity		1: Even parity	4	<b>0: Parity disabled</b>		1: Parity enabled	5	0: 1 Stop bit		<b>1: 2 Stop bits</b>	8-15	Response delay [ms] (5..255)
Bit	Description																																						
0-2	Baudrate																																						
0:	9600																																						
1:	14400																																						
<b>2:</b>	<b>19200</b>																																						
3:	38400																																						
4:	56000																																						
5:	57600																																						
6:	115200																																						
7:	Reserved																																						
3	0: Odd parity																																						
	1: Even parity																																						
4	<b>0: Parity disabled</b>																																						
	1: Parity enabled																																						
5	0: 1 Stop bit																																						
	<b>1: 2 Stop bits</b>																																						
8-15	Response delay [ms] (5..255)																																						

### Resetting of communication settings

Once the MODBUS settings have been stored in the device, communication with the device is only possible if the settings are known.

The following technique resets the MODBUS settings to the delivery status:

- Device address: 01h
- Baudrate: 19200
- Parity: None
- Stop bits: 2

A plug prepared for this purpose (Terminal + is connected to Terminal GND with a resistance of 1 kOhm) is connected to the RS485 interface before the device is switched on.

After the device has been switched on, the red LED shines for approx. 30 seconds. During this time, the green LED flashes. Subsequently, the red LED turns off (the green LED continues flashing). Within further 30 seconds, this plug has to be removed from the device.

After the successful completion of this procedure, the communication default settings are stored again in the device.

If the procedure described is not adhered to, the interface parameters are not changed.

## Configuration

Address	Description	Data type	#	Default	Description																																																																																																						
40517	DATE	UINT32		0	Configuration date (UTC time stamp in seconds starting 1.1.1970)																																																																																																						
40519	TAG	CHAR[8]		"V604s"\0 or "VB604s"\0	Device text																																																																																																						
40523	INPUT1	UINT8	0	00h at 2xmA: 40h	<p>Type of measurement Input 1 FFh: Measurement is inactive</p> <p><b>Wiring variant A</b></p> <table> <tbody> <tr><td>00h:</td><td>Voltage measurement [mV]</td><td>Terminal 3,4</td></tr> <tr><td>04h:</td><td>Thermocouple internally compensated [K]</td><td>3,4</td></tr> <tr><td>60h:</td><td>Thermocouple with ext. cold junction thermostat [K]</td><td>3,4</td></tr> <tr><td>21h:</td><td>Resistance thermometer 2-wire [K]</td><td>1,4</td></tr> <tr><td>22h:</td><td>Resistance thermometer 3-wire [K]</td><td>1,3,4</td></tr> <tr><td>23h:</td><td>Resistance thermometer 4-wire [K]</td><td>1,2,3,4</td></tr> <tr><td>24h:</td><td>Thermocouple with ext. Pt100 on Terminals 1-4 [K]</td><td>1,3,4</td></tr> <tr><td>44h:</td><td>Thermocouple with ext. Pt100 on Terminals 2-8 [K]</td><td>3,4,2,8</td></tr> <tr><td>01h:</td><td>Resistance measurement 2-wire [<math>\Omega</math>]</td><td>1,4</td></tr> <tr><td>02h:</td><td>Resistance measurement 3-wire [<math>\Omega</math>]</td><td>1,3,4</td></tr> <tr><td>03h:</td><td>Resistance measurement 4-wire [<math>\Omega</math>]</td><td>1,2,3,4</td></tr> <tr><td>42h:</td><td>Resistance teletransmitter WF [<math>\Omega</math>]</td><td>1,3,4</td></tr> <tr><td>62h:</td><td>Resistance teletransmitter WFDIN [<math>\Omega</math>]</td><td>1,3,4</td></tr> <tr><td>20h:</td><td>Voltage measurement [V]</td><td>6,4</td></tr> <tr><td>40h:</td><td>Current measurement [mA]</td><td>5,4</td></tr> <tr><td>06h:</td><td>Sensor earthed: Voltage measurement [mV]</td><td>3,4</td></tr> <tr><td>07h:</td><td>Sensor earthed: TC internally compensated [K]</td><td>3,4</td></tr> <tr><td>66h:</td><td>Sensor earthed: TC, ext. cold junction thermostat [K]</td><td>3,4</td></tr> <tr><td>27h:</td><td>Sensor earthed: TC with ext. Pt100 on Terminals 1-4 [K]</td><td>1,3,4</td></tr> </tbody> </table> <p><b>Wiring variant B</b></p> <table> <tbody> <tr><td>10h:</td><td>Voltage measurement [mV]</td><td>7,8</td></tr> <tr><td>14h:</td><td>Thermocouple internally compensated [K]</td><td>7,8</td></tr> <tr><td>70h:</td><td>Thermocouple with ext. cold junction thermostat [K]</td><td>7,8</td></tr> <tr><td>31h:</td><td>Resistance thermometer 2-wire [K]</td><td>2,8</td></tr> <tr><td>32h:</td><td>Resistance thermometer 3-wire [K]</td><td>2,7,8</td></tr> <tr><td>54h:</td><td>Thermocouple with ext. Pt100 on Terminals 1-4 [K]</td><td>7,8,1,4</td></tr> <tr><td>34h:</td><td>Thermocouple with ext. Pt100 on Terminals 2-8 [K]</td><td>2,7,8</td></tr> <tr><td>11h:</td><td>Resistance measurement 2-wire [<math>\Omega</math>]</td><td>2,8</td></tr> <tr><td>12h:</td><td>Resistance measurement 3-wire [<math>\Omega</math>]</td><td>2,7,8</td></tr> <tr><td>52h:</td><td>Resistance teletransmitter WF [<math>\Omega</math>]</td><td>2,7,8</td></tr> <tr><td>72h:</td><td>Resistance teletransmitter WFDIN [<math>\Omega</math>]</td><td>2,7,8</td></tr> <tr><td>16h:</td><td>Sensor earthed: Voltage measurement [mV]</td><td>7,8</td></tr> <tr><td>17h:</td><td>Sensor earthed: TC internally compensated [K]</td><td>7,8</td></tr> <tr><td>76h:</td><td>Sensor earthed: TC, ext. cold junction thermostat [K]</td><td>7,8</td></tr> <tr><td>50h:</td><td>2nd current input [mA]</td><td>6,4</td></tr> </tbody> </table> <p>Combination limits are separately shown in a table on page 22/23.</p>	00h:	Voltage measurement [mV]	Terminal 3,4	04h:	Thermocouple internally compensated [K]	3,4	60h:	Thermocouple with ext. cold junction thermostat [K]	3,4	21h:	Resistance thermometer 2-wire [K]	1,4	22h:	Resistance thermometer 3-wire [K]	1,3,4	23h:	Resistance thermometer 4-wire [K]	1,2,3,4	24h:	Thermocouple with ext. Pt100 on Terminals 1-4 [K]	1,3,4	44h:	Thermocouple with ext. Pt100 on Terminals 2-8 [K]	3,4,2,8	01h:	Resistance measurement 2-wire [ $\Omega$ ]	1,4	02h:	Resistance measurement 3-wire [ $\Omega$ ]	1,3,4	03h:	Resistance measurement 4-wire [ $\Omega$ ]	1,2,3,4	42h:	Resistance teletransmitter WF [ $\Omega$ ]	1,3,4	62h:	Resistance teletransmitter WFDIN [ $\Omega$ ]	1,3,4	20h:	Voltage measurement [V]	6,4	40h:	Current measurement [mA]	5,4	06h:	Sensor earthed: Voltage measurement [mV]	3,4	07h:	Sensor earthed: TC internally compensated [K]	3,4	66h:	Sensor earthed: TC, ext. cold junction thermostat [K]	3,4	27h:	Sensor earthed: TC with ext. Pt100 on Terminals 1-4 [K]	1,3,4	10h:	Voltage measurement [mV]	7,8	14h:	Thermocouple internally compensated [K]	7,8	70h:	Thermocouple with ext. cold junction thermostat [K]	7,8	31h:	Resistance thermometer 2-wire [K]	2,8	32h:	Resistance thermometer 3-wire [K]	2,7,8	54h:	Thermocouple with ext. Pt100 on Terminals 1-4 [K]	7,8,1,4	34h:	Thermocouple with ext. Pt100 on Terminals 2-8 [K]	2,7,8	11h:	Resistance measurement 2-wire [ $\Omega$ ]	2,8	12h:	Resistance measurement 3-wire [ $\Omega$ ]	2,7,8	52h:	Resistance teletransmitter WF [ $\Omega$ ]	2,7,8	72h:	Resistance teletransmitter WFDIN [ $\Omega$ ]	2,7,8	16h:	Sensor earthed: Voltage measurement [mV]	7,8	17h:	Sensor earthed: TC internally compensated [K]	7,8	76h:	Sensor earthed: TC, ext. cold junction thermostat [K]	7,8	50h:	2nd current input [mA]	6,4
00h:	Voltage measurement [mV]	Terminal 3,4																																																																																																									
04h:	Thermocouple internally compensated [K]	3,4																																																																																																									
60h:	Thermocouple with ext. cold junction thermostat [K]	3,4																																																																																																									
21h:	Resistance thermometer 2-wire [K]	1,4																																																																																																									
22h:	Resistance thermometer 3-wire [K]	1,3,4																																																																																																									
23h:	Resistance thermometer 4-wire [K]	1,2,3,4																																																																																																									
24h:	Thermocouple with ext. Pt100 on Terminals 1-4 [K]	1,3,4																																																																																																									
44h:	Thermocouple with ext. Pt100 on Terminals 2-8 [K]	3,4,2,8																																																																																																									
01h:	Resistance measurement 2-wire [ $\Omega$ ]	1,4																																																																																																									
02h:	Resistance measurement 3-wire [ $\Omega$ ]	1,3,4																																																																																																									
03h:	Resistance measurement 4-wire [ $\Omega$ ]	1,2,3,4																																																																																																									
42h:	Resistance teletransmitter WF [ $\Omega$ ]	1,3,4																																																																																																									
62h:	Resistance teletransmitter WFDIN [ $\Omega$ ]	1,3,4																																																																																																									
20h:	Voltage measurement [V]	6,4																																																																																																									
40h:	Current measurement [mA]	5,4																																																																																																									
06h:	Sensor earthed: Voltage measurement [mV]	3,4																																																																																																									
07h:	Sensor earthed: TC internally compensated [K]	3,4																																																																																																									
66h:	Sensor earthed: TC, ext. cold junction thermostat [K]	3,4																																																																																																									
27h:	Sensor earthed: TC with ext. Pt100 on Terminals 1-4 [K]	1,3,4																																																																																																									
10h:	Voltage measurement [mV]	7,8																																																																																																									
14h:	Thermocouple internally compensated [K]	7,8																																																																																																									
70h:	Thermocouple with ext. cold junction thermostat [K]	7,8																																																																																																									
31h:	Resistance thermometer 2-wire [K]	2,8																																																																																																									
32h:	Resistance thermometer 3-wire [K]	2,7,8																																																																																																									
54h:	Thermocouple with ext. Pt100 on Terminals 1-4 [K]	7,8,1,4																																																																																																									
34h:	Thermocouple with ext. Pt100 on Terminals 2-8 [K]	2,7,8																																																																																																									
11h:	Resistance measurement 2-wire [ $\Omega$ ]	2,8																																																																																																									
12h:	Resistance measurement 3-wire [ $\Omega$ ]	2,7,8																																																																																																									
52h:	Resistance teletransmitter WF [ $\Omega$ ]	2,7,8																																																																																																									
72h:	Resistance teletransmitter WFDIN [ $\Omega$ ]	2,7,8																																																																																																									
16h:	Sensor earthed: Voltage measurement [mV]	7,8																																																																																																									
17h:	Sensor earthed: TC internally compensated [K]	7,8																																																																																																									
76h:	Sensor earthed: TC, ext. cold junction thermostat [K]	7,8																																																																																																									
50h:	2nd current input [mA]	6,4																																																																																																									
		1	FF		<p>Sensor type Input 1 FFh: Linear</p> <table> <tbody> <tr><td>0:</td><td>RTD Ptxxx (e.g. Pt100)</td></tr> <tr><td>1:</td><td>RTD Nixxx</td></tr> <tr><td>2:</td><td>Customer-specific characteristic curve (only with NLB)</td></tr> <tr><td>3:</td><td>TC Type B</td></tr> <tr><td>4:</td><td>TC Type E</td></tr> <tr><td>5:</td><td>TC Type J</td></tr> <tr><td>6:</td><td>TC Type K</td></tr> <tr><td>7:</td><td>TC Type L</td></tr> <tr><td>8:</td><td>TC Type N</td></tr> <tr><td>9:</td><td>TC Type R</td></tr> <tr><td>10:</td><td>TC Type S</td></tr> <tr><td>11:</td><td>TC Type T</td></tr> <tr><td>12:</td><td>TC Type U</td></tr> <tr><td>13:</td><td>TC Type W5-W26Re</td></tr> <tr><td>14:</td><td>TC Type W3-W25Re</td></tr> </tbody> </table> <p><i>Automatic parameter correction<sup>2</sup></i></p>	0:	RTD Ptxxx (e.g. Pt100)	1:	RTD Nixxx	2:	Customer-specific characteristic curve (only with NLB)	3:	TC Type B	4:	TC Type E	5:	TC Type J	6:	TC Type K	7:	TC Type L	8:	TC Type N	9:	TC Type R	10:	TC Type S	11:	TC Type T	12:	TC Type U	13:	TC Type W5-W26Re	14:	TC Type W3-W25Re																																																																								
0:	RTD Ptxxx (e.g. Pt100)																																																																																																										
1:	RTD Nixxx																																																																																																										
2:	Customer-specific characteristic curve (only with NLB)																																																																																																										
3:	TC Type B																																																																																																										
4:	TC Type E																																																																																																										
5:	TC Type J																																																																																																										
6:	TC Type K																																																																																																										
7:	TC Type L																																																																																																										
8:	TC Type N																																																																																																										
9:	TC Type R																																																																																																										
10:	TC Type S																																																																																																										
11:	TC Type T																																																																																																										
12:	TC Type U																																																																																																										
13:	TC Type W5-W26Re																																																																																																										
14:	TC Type W3-W25Re																																																																																																										


Address	Description	Data type	#	Default	Description																					
40524	INPRANGE1	REAL			Measuring range Input 1																					
					<table> <thead> <tr> <th>Variable</th> <th>Range</th> <th>Minimum span</th> </tr> </thead> <tbody> <tr> <td>U[mV]:</td> <td><math>\pm 0 \text{ mV} \dots 1000 \text{ mV}</math></td> <td>2 mV</td> </tr> <tr> <td>U[V]:</td> <td><math>\pm 0 \text{ V} \dots 300 \text{ V}</math></td> <td>1 V</td> </tr> <tr> <td>RTD:</td> <td>Acc. sensor limits</td> <td></td> </tr> <tr> <td>TC:</td> <td>Acc. sensor limits</td> <td></td> </tr> <tr> <td>R:</td> <td>0 ... 5000 [<math>\Omega</math>] see special case WF, WFDIN *</td> <td>8 Ohm</td> </tr> <tr> <td>I [mA]:</td> <td><math>\pm 0 \dots 50 \text{ mA}</math></td> <td>0.2 mA</td> </tr> </tbody> </table> <p><i>Automatic parameter correction<sup>2</sup></i></p>	Variable	Range	Minimum span	U[mV]:	$\pm 0 \text{ mV} \dots 1000 \text{ mV}$	2 mV	U[V]:	$\pm 0 \text{ V} \dots 300 \text{ V}$	1 V	RTD:	Acc. sensor limits		TC:	Acc. sensor limits		R:	0 ... 5000 [ $\Omega$ ] see special case WF, WFDIN *	8 Ohm	I [mA]:	$\pm 0 \dots 50 \text{ mA}$	0.2 mA
Variable	Range	Minimum span																								
U[mV]:	$\pm 0 \text{ mV} \dots 1000 \text{ mV}$	2 mV																								
U[V]:	$\pm 0 \text{ V} \dots 300 \text{ V}$	1 V																								
RTD:	Acc. sensor limits																									
TC:	Acc. sensor limits																									
R:	0 ... 5000 [ $\Omega$ ] see special case WF, WFDIN *	8 Ohm																								
I [mA]:	$\pm 0 \dots 50 \text{ mA}$	0.2 mA																								
				0	0.0 at 2mA: 4.0																					
				1	1000.0 at 2mA: 20.0	Measuring range end																				
40528	SCALE1	REAL		1.0	Scaling factor for INPUT1																					
40530	SENSVAL1	REAL		100.0	Input 1: Sensor value [ $\Omega$ ] at 0°C (e.g. 100.0 for Pt100) Pt20 ... Pt1000 Ni50 ... Ni1000 WF, WFDIN: SENSVAL1=Rd <i>Automatic parameter correction<sup>2</sup></i>																					
40532	REF1	REAL		0.0	Reference value Input 1: – Line resistance [ $\Omega$ ] in 2-wire measurement: 0...30 Ohm – Reference temperature in TC ext. comp.: -20 ... 70 °C <i>Automatic parameter correction<sup>2</sup></i>																					
40534	INPUT2	UINT8	0	FFh at 2mA: 50h	Type of measurement Input 2 (same as Input 1)																					
			1	FFh	Sensor type Input 2 (same as Input 1)																					
40535	INPRANGE2	REAL			Measuring range Input 2 (same as Input 1)																					
				0	0.0 at 2mA: 4.0	Measuring range start																				
				1	1000.0 at 2mA: 20.0	Measuring range end																				
40539	SCALE2	REAL		1.0	Scaling factor for INPUT2																					
40541	SENSVAL2	REAL		100.0	Input 2: Sensor value [ $\Omega$ ] at 0°C (e.g. 100.0 for Pt100) Pt20 ... Pt1000 Ni50 ... Ni1000 WF, WFDIN: SENSVAL1=Rd <i>Automatic parameter correction<sup>2</sup></i>																					
40543	REF2	REAL		0.0	Reference value Input 2: – Line resistance [ $\Omega$ ] in 2-wire measurement: 0 ... 30 Ohm – Reference temperature [°C] in TC ext. comp.: -20 ... 70 °C																					
40545	FREQ	REAL		50.0	System frequency [Hz]: 10 ... 100 Hz <i>Automatic parameter correction<sup>2</sup></i>																					

\* **Resistance teletransmitter**

For teletransmitters the measuring range is defined by 3 resistance values

Input 2: Same as Input 1.

Parameter	Meaning
INPRANGE1, measuring range start	Ra
INPRANGE1, measuring range end	Re
SENSVAL1	Rd

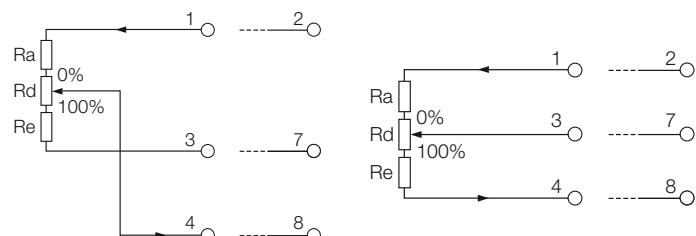

Address	Description	Data type	#	Default	Description																												
40547	TSET	REAL		1.0	Settling time (99%) [s] (1 ... 30) <i>Automatic parameter correction<sup>2</sup></i>																												
40549	SETTING	UINT16		00h	<p>Settings</p> <table> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Recognition of the type of connection (2L, 3L, 4L) after reset</td> </tr> <tr> <td>1</td> <td>Input 1: Breakage monitoring activated</td> </tr> <tr> <td>2</td> <td>Input 2: Breakage monitoring activated</td> </tr> <tr> <td>3</td> <td>Input 1: Short circuit monitoring activated</td> </tr> <tr> <td>4</td> <td>Input 2: Short circuit monitoring activated</td> </tr> </tbody> </table>	Bit	Description	0	Recognition of the type of connection (2L, 3L, 4L) after reset	1	Input 1: Breakage monitoring activated	2	Input 2: Breakage monitoring activated	3	Input 1: Short circuit monitoring activated	4	Input 2: Short circuit monitoring activated																
Bit	Description																																
0	Recognition of the type of connection (2L, 3L, 4L) after reset																																
1	Input 1: Breakage monitoring activated																																
2	Input 2: Breakage monitoring activated																																
3	Input 1: Short circuit monitoring activated																																
4	Input 2: Short circuit monitoring activated																																
40550	MATRIX	UINT8			<p>Linking of inputs with outputs</p> <table> <tbody> <tr> <td>0</td> <td>01h</td> <td> <p>Output 1:</p> <p>00h: Not used 01h: Input 1 02h: Input 2 03h: Input 1 + 2 04h: Input 1 – 2 05h: Input 2 – 1 06h: Input 1 * 2 07h: Minimum value (Input 1,2) 08h: Maximum value (Input 1,2) 09h: Mean value (Input 1,2) 81h: Sensor redundancy: Input 1 normally 82h: Sensor redundancy: Input 2 normally 87h: Sensor redundancy: Minimum value (Input 1,2) 88h: Sensor redundancy: Maximum value (Input 1,2) 89h: Sensor redundancy: Mean value (Input 1,2)</p> <p>Bit: Absolute value of the measured variable for the output</p> <ul style="list-style-type: none"> <li>- Only measured variables of the same unit may be linked.</li> <li>- Product formation: Only possible for combinations V*mV, V*mA, mA*mA, mV*mA and mV*mV.</li> </ul> <p>Sensor redundancy</p> <ul style="list-style-type: none"> <li>- Measured variable in case of a fault: INPUTx which does not show a fault</li> <li>- Limitations: <ul style="list-style-type: none"> <li>- The same measuring range for both inputs</li> <li>- The same scaling factors (always 1.0)</li> <li>- No output value in case of a fault</li> <li>- Temperature measurement</li> <li>- Breakage or short circuit monitoring active</li> </ul> </li> </ul> </td> </tr> <tr> <td>1</td> <td>00h at 2xmA: 02h</td> <td>Output 2 (same as Output 1)</td> </tr> </tbody> </table>	0	01h	<p>Output 1:</p> <p>00h: Not used 01h: Input 1 02h: Input 2 03h: Input 1 + 2 04h: Input 1 – 2 05h: Input 2 – 1 06h: Input 1 * 2 07h: Minimum value (Input 1,2) 08h: Maximum value (Input 1,2) 09h: Mean value (Input 1,2) 81h: Sensor redundancy: Input 1 normally 82h: Sensor redundancy: Input 2 normally 87h: Sensor redundancy: Minimum value (Input 1,2) 88h: Sensor redundancy: Maximum value (Input 1,2) 89h: Sensor redundancy: Mean value (Input 1,2)</p> <p>Bit: Absolute value of the measured variable for the output</p> <ul style="list-style-type: none"> <li>- Only measured variables of the same unit may be linked.</li> <li>- Product formation: Only possible for combinations V*mV, V*mA, mA*mA, mV*mA and mV*mV.</li> </ul> <p>Sensor redundancy</p> <ul style="list-style-type: none"> <li>- Measured variable in case of a fault: INPUTx which does not show a fault</li> <li>- Limitations: <ul style="list-style-type: none"> <li>- The same measuring range for both inputs</li> <li>- The same scaling factors (always 1.0)</li> <li>- No output value in case of a fault</li> <li>- Temperature measurement</li> <li>- Breakage or short circuit monitoring active</li> </ul> </li> </ul>	1	00h at 2xmA: 02h	Output 2 (same as Output 1)																						
0	01h	<p>Output 1:</p> <p>00h: Not used 01h: Input 1 02h: Input 2 03h: Input 1 + 2 04h: Input 1 – 2 05h: Input 2 – 1 06h: Input 1 * 2 07h: Minimum value (Input 1,2) 08h: Maximum value (Input 1,2) 09h: Mean value (Input 1,2) 81h: Sensor redundancy: Input 1 normally 82h: Sensor redundancy: Input 2 normally 87h: Sensor redundancy: Minimum value (Input 1,2) 88h: Sensor redundancy: Maximum value (Input 1,2) 89h: Sensor redundancy: Mean value (Input 1,2)</p> <p>Bit: Absolute value of the measured variable for the output</p> <ul style="list-style-type: none"> <li>- Only measured variables of the same unit may be linked.</li> <li>- Product formation: Only possible for combinations V*mV, V*mA, mA*mA, mV*mA and mV*mV.</li> </ul> <p>Sensor redundancy</p> <ul style="list-style-type: none"> <li>- Measured variable in case of a fault: INPUTx which does not show a fault</li> <li>- Limitations: <ul style="list-style-type: none"> <li>- The same measuring range for both inputs</li> <li>- The same scaling factors (always 1.0)</li> <li>- No output value in case of a fault</li> <li>- Temperature measurement</li> <li>- Breakage or short circuit monitoring active</li> </ul> </li> </ul>																															
1	00h at 2xmA: 02h	Output 2 (same as Output 1)																															
40551	LIMITA	UINT8			<p>Setting of limit values</p> <table> <tbody> <tr> <td>0</td> <td>0</td> <td> <p>Measured variable for Limit value 1</p> <table> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0-4</td> <td>Limit value</td> <td> <table> <tr> <td>0: Not used</td> </tr> <tr> <td>1: Input 1 (INPUT1)</td> </tr> <tr> <td>2: Input 2 (INPUT2)</td> </tr> <tr> <td>3: Measured variable Output 1 (MEAS1)</td> </tr> <tr> <td>4: Measured variable Output 2 (MEAS2)</td> </tr> <tr> <td>5: Input 1 – Input 2</td> </tr> <tr> <td>6: Input 2 – Input 1</td> </tr> <tr> <td>7: Meter 1 (CNTR1 x 10^CNTR1_EXP)</td> </tr> </table> </td> </tr> <tr> <td>6</td> <td></td> <td>Absolute value of measured variable for the limit value</td> </tr> <tr> <td>7</td> <td></td> <td>1: Gradient dx/dt</td> </tr> </tbody> </table> <p>Note: Drift monitoring is realised by difference calculation. Only measured variables of the same unit may be linked.</p> </td></tr> <tr> <td></td><td></td><td>1</td><td>0</td><td></td><td>Measure variable for Limit value 2 (same as Limit value 1)</td></tr> </tbody> </table>	0	0	<p>Measured variable for Limit value 1</p> <table> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0-4</td> <td>Limit value</td> <td> <table> <tr> <td>0: Not used</td> </tr> <tr> <td>1: Input 1 (INPUT1)</td> </tr> <tr> <td>2: Input 2 (INPUT2)</td> </tr> <tr> <td>3: Measured variable Output 1 (MEAS1)</td> </tr> <tr> <td>4: Measured variable Output 2 (MEAS2)</td> </tr> <tr> <td>5: Input 1 – Input 2</td> </tr> <tr> <td>6: Input 2 – Input 1</td> </tr> <tr> <td>7: Meter 1 (CNTR1 x 10^CNTR1_EXP)</td> </tr> </table> </td> </tr> <tr> <td>6</td> <td></td> <td>Absolute value of measured variable for the limit value</td> </tr> <tr> <td>7</td> <td></td> <td>1: Gradient dx/dt</td> </tr> </tbody> </table> <p>Note: Drift monitoring is realised by difference calculation. Only measured variables of the same unit may be linked.</p>	Bit	Description	0-4	Limit value	<table> <tr> <td>0: Not used</td> </tr> <tr> <td>1: Input 1 (INPUT1)</td> </tr> <tr> <td>2: Input 2 (INPUT2)</td> </tr> <tr> <td>3: Measured variable Output 1 (MEAS1)</td> </tr> <tr> <td>4: Measured variable Output 2 (MEAS2)</td> </tr> <tr> <td>5: Input 1 – Input 2</td> </tr> <tr> <td>6: Input 2 – Input 1</td> </tr> <tr> <td>7: Meter 1 (CNTR1 x 10^CNTR1_EXP)</td> </tr> </table>	0: Not used	1: Input 1 (INPUT1)	2: Input 2 (INPUT2)	3: Measured variable Output 1 (MEAS1)	4: Measured variable Output 2 (MEAS2)	5: Input 1 – Input 2	6: Input 2 – Input 1	7: Meter 1 (CNTR1 x 10^CNTR1_EXP)	6		Absolute value of measured variable for the limit value	7		1: Gradient dx/dt			1	0		Measure variable for Limit value 2 (same as Limit value 1)
0	0	<p>Measured variable for Limit value 1</p> <table> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0-4</td> <td>Limit value</td> <td> <table> <tr> <td>0: Not used</td> </tr> <tr> <td>1: Input 1 (INPUT1)</td> </tr> <tr> <td>2: Input 2 (INPUT2)</td> </tr> <tr> <td>3: Measured variable Output 1 (MEAS1)</td> </tr> <tr> <td>4: Measured variable Output 2 (MEAS2)</td> </tr> <tr> <td>5: Input 1 – Input 2</td> </tr> <tr> <td>6: Input 2 – Input 1</td> </tr> <tr> <td>7: Meter 1 (CNTR1 x 10^CNTR1_EXP)</td> </tr> </table> </td> </tr> <tr> <td>6</td> <td></td> <td>Absolute value of measured variable for the limit value</td> </tr> <tr> <td>7</td> <td></td> <td>1: Gradient dx/dt</td> </tr> </tbody> </table> <p>Note: Drift monitoring is realised by difference calculation. Only measured variables of the same unit may be linked.</p>	Bit	Description	0-4	Limit value	<table> <tr> <td>0: Not used</td> </tr> <tr> <td>1: Input 1 (INPUT1)</td> </tr> <tr> <td>2: Input 2 (INPUT2)</td> </tr> <tr> <td>3: Measured variable Output 1 (MEAS1)</td> </tr> <tr> <td>4: Measured variable Output 2 (MEAS2)</td> </tr> <tr> <td>5: Input 1 – Input 2</td> </tr> <tr> <td>6: Input 2 – Input 1</td> </tr> <tr> <td>7: Meter 1 (CNTR1 x 10^CNTR1_EXP)</td> </tr> </table>	0: Not used	1: Input 1 (INPUT1)	2: Input 2 (INPUT2)	3: Measured variable Output 1 (MEAS1)	4: Measured variable Output 2 (MEAS2)	5: Input 1 – Input 2	6: Input 2 – Input 1	7: Meter 1 (CNTR1 x 10^CNTR1_EXP)	6		Absolute value of measured variable for the limit value	7		1: Gradient dx/dt												
Bit	Description																																
0-4	Limit value	<table> <tr> <td>0: Not used</td> </tr> <tr> <td>1: Input 1 (INPUT1)</td> </tr> <tr> <td>2: Input 2 (INPUT2)</td> </tr> <tr> <td>3: Measured variable Output 1 (MEAS1)</td> </tr> <tr> <td>4: Measured variable Output 2 (MEAS2)</td> </tr> <tr> <td>5: Input 1 – Input 2</td> </tr> <tr> <td>6: Input 2 – Input 1</td> </tr> <tr> <td>7: Meter 1 (CNTR1 x 10^CNTR1_EXP)</td> </tr> </table>	0: Not used	1: Input 1 (INPUT1)	2: Input 2 (INPUT2)	3: Measured variable Output 1 (MEAS1)	4: Measured variable Output 2 (MEAS2)	5: Input 1 – Input 2	6: Input 2 – Input 1	7: Meter 1 (CNTR1 x 10^CNTR1_EXP)																							
0: Not used																																	
1: Input 1 (INPUT1)																																	
2: Input 2 (INPUT2)																																	
3: Measured variable Output 1 (MEAS1)																																	
4: Measured variable Output 2 (MEAS2)																																	
5: Input 1 – Input 2																																	
6: Input 2 – Input 1																																	
7: Meter 1 (CNTR1 x 10^CNTR1_EXP)																																	
6		Absolute value of measured variable for the limit value																															
7		1: Gradient dx/dt																															
		1	0		Measure variable for Limit value 2 (same as Limit value 1)																												

Address	Description	Data type	#	Default	Description									
40552	ALARMSETA	UINT8			<p>Relay and alarm (Relay 1)</p> <table border="1"> <tr> <td>0</td> <td>00h</td> <td> <p>Relay 1, LED relay 1</p> <p><i>Bit Description</i></p> <hr/> <p>0 Limit value 1 1 Limit value 2 2 Sensor breakage Input 1 or 2 3 Sensor short circuit Input 1 or 2 7 Inverted</p> </td> </tr> <tr> <td>1</td> <td>00h</td> <td> <p>These settings may all be combined with each other.</p> <p>Alarm 1, LED alarm</p> <p><i>Bit Description</i></p> <hr/> <p>0 Limit value 1 1 Limit value 2 2 Sensor breakage Input 1 or 2 3 Sensor short circuit Input 1 or 2</p> </td> </tr> <tr> <td></td> <td></td> <td> <p>These settings may all be combined with each other.</p> </td> </tr> </table>	0	00h	<p>Relay 1, LED relay 1</p> <p><i>Bit Description</i></p> <hr/> <p>0 Limit value 1 1 Limit value 2 2 Sensor breakage Input 1 or 2 3 Sensor short circuit Input 1 or 2 7 Inverted</p>	1	00h	<p>These settings may all be combined with each other.</p> <p>Alarm 1, LED alarm</p> <p><i>Bit Description</i></p> <hr/> <p>0 Limit value 1 1 Limit value 2 2 Sensor breakage Input 1 or 2 3 Sensor short circuit Input 1 or 2</p>			<p>These settings may all be combined with each other.</p>
0	00h	<p>Relay 1, LED relay 1</p> <p><i>Bit Description</i></p> <hr/> <p>0 Limit value 1 1 Limit value 2 2 Sensor breakage Input 1 or 2 3 Sensor short circuit Input 1 or 2 7 Inverted</p>												
1	00h	<p>These settings may all be combined with each other.</p> <p>Alarm 1, LED alarm</p> <p><i>Bit Description</i></p> <hr/> <p>0 Limit value 1 1 Limit value 2 2 Sensor breakage Input 1 or 2 3 Sensor short circuit Input 1 or 2</p>												
		<p>These settings may all be combined with each other.</p>												
40553	TON	REAL		0.0	Alarms rise delay [s]: 0..60									
40555	TOFF	REAL		0.0	Alarms drop delay [s]: 0..60									
40557	TONLIMITA	REAL		0.0	Limit values 1,2: rise delay [s]: 0..3600									
40559	TOFFLIMITA	REAL		0.0	Limit values 1,2: drop delay [s]: 0..3600									
40561	LIMIT1ON	REAL		0.0	Switching-on threshold Limit value 1, unit of LIMIT1									
40563	LIMIT1OFF	REAL		0.0	Switching-off threshold Limit value 1, unit of LIMIT1									
40565	LIMIT2ON	REAL		0.0	Switching-on threshold Limit value 2, unit of LIMIT2									
40567	LIMIT2OFF	REAL		0.0	Switching-off threshold Limit value 2, unit of LIMIT2									
40569	OUTSET1	UINT16		05h at VB604s 01h	<p>Output settings Output 1</p> <p><i>Bit Description</i></p> <hr/> <p>0-1 Output limit 0: ±0 mA or 0 V <b>1: ±1 mA or 0.5 V</b> 2: ±2 mA or 1 V 3: -0.2/+0.5 mA or -0.1/+0.25 V (e.g. 3.8 mA ... 20.5 mA)</p> <p>2 Signal flow 0: Interrupted (only possible with VB604s) 1: Activated (VB604s)</p> <p>3 Output configuration <b>O: Current output</b> 1: Voltage output</p> <p>4 Inverting      <b>O: normal</b>, 1: inverted</p> <p>5 Table      <b>O: without</b>, 1: with table</p> <p>6-7 Output in case of a fault <b>O: PERCENTx</b>, 1: ERRVALx in case of fault Input 1 2: ERRVALx in case of fault Input 2 3: ERRVALx in case of fault Input 1 or 2</p> <p>8-15 Transmission function 0: User-defined 1: Linear 2: Quadratic 3: Volume of a horizontal cylinder</p>									
40570	OUTRANGE1	REAL			<p>Output range Output 1</p> <p><i>Automatic parameter correction</i><sup>2</sup></p> <table border="1"> <tr> <td>0</td> <td>4.0</td> <td>Minimum value    -20...20 [mA] / -10...10 [V]</td> </tr> <tr> <td>1</td> <td>20.0</td> <td>Maximum value    -20...20 [mA] / -10...10 [V]</td> </tr> </table>	0	4.0	Minimum value    -20...20 [mA] / -10...10 [V]	1	20.0	Maximum value    -20...20 [mA] / -10...10 [V]			
0	4.0	Minimum value    -20...20 [mA] / -10...10 [V]												
1	20.0	Maximum value    -20...20 [mA] / -10...10 [V]												
40574	TRIM1	REAL			<p>Output trimming Output 1</p> <p><i>Automatic parameter correction</i><sup>2</sup></p> <table border="1"> <tr> <td>0</td> <td>0.0</td> <td>Offset trimming [in % of the output range, setting range +/- 10%]<sup>1</sup></td> </tr> <tr> <td>1</td> <td>100.0</td> <td>Gain trimming [in % of the output range, setting range 90...110%]<sup>1</sup></td> </tr> </table>	0	0.0	Offset trimming [in % of the output range, setting range +/- 10%] <sup>1</sup>	1	100.0	Gain trimming [in % of the output range, setting range 90...110%] <sup>1</sup>			
0	0.0	Offset trimming [in % of the output range, setting range +/- 10%] <sup>1</sup>												
1	100.0	Gain trimming [in % of the output range, setting range 90...110%] <sup>1</sup>												
40578	ERRVAL1	REAL		0.0	Output value Output 1 in case of a fault [in % of the output range, setting range -10...+110%] <sup>1</sup>									

Address	Description	Data type	#	Default	Description
40580	OUTSET2	UINT16		05h, at VB604s 01h	Output settings Output 2 (same as Output 1)
40581	OUTRANGE2	REAL	Output range Output 2		
			0	4.0	Minimum value -20...20 [mA] / -10...10 [V]
40585	TRIM2	REAL	Output trimming Output 2		
			0	0.0	Offset trimming [in % of the output range, setting range +/- 10%] <sup>1</sup>
			1	100.0	Gain trimming [in % of the output range, setting range 90...110%] <sup>1</sup>
40589	ERRVAL2	REAL		0.0	Output value Output 2 in case of a fault [in % of the output range, setting range -10...+110%] <sup>1</sup>
40591	GRAD_TIME	REAL		1.0	Time span between two measured values for gradient calculation of limit values in seconds Range: 4 x TSET ... 26210 s <i>Automatic parameter correction<sup>2</sup></i>
40593	NUMTAB	UINT8	Number of table values		
			0	0	Number of table values Table 1 <i>Automatic parameter correction<sup>2</sup></i>
			1	0	Number of table values Table 2 <i>Automatic parameter correction<sup>2</sup></i>
40594	TAB1_YA	REAL		-10.0	Table 1: Y-value (-10%) in % of the measuring range
40596	TAB1_X	REAL[20]		0.0	Table 1: X-values in % of the measuring range
40636	TAB1_Y	REAL[20]		0.0	Table 1: Y-values in % of the measuring range
40676	TAB1_YE	REAL		110.0	Table 1: Y-value (110%) in % of the measuring range
40678	TAB2_YA	REAL		-10.0	Tabelle 1: Y-Wert (-10%) in % vom Messbereich
40680	TAB2_X	REAL[20]		0.0	Tabelle 1: X-Werte in % vom Messbereich
40720	TAB2_Y	REAL[20]		0.0	Tabelle 1: Y-Werte in % vom Messbereich
40760	TAB2_YE	REAL		110.0	Tabelle 1: Y-Wert (110%) in % vom Messbereich
40762 to 40775	Reserved	--	--	--	Reserved
40776	OFFSET1	REAL		0.0	Offset value for INPUT1, same unit as INPUT1
40778	MEASRANGE1	REAL	Measured value range for output 1 in % if the largest possible measured variable range		
			0	0.0	Measured variable range minimum [%]
			1	100.0	Measured variable range maximum [%] - Requirement: Minimum < maximum
40782	OFFSET2	REAL		0.0	Offset value for INPUT2, same unit as INPUT2
40784	MEASRANGE2	REAL	Measured value range for output 2 in % of the largest possible measured variable range		
			0	0.0	Measured variable range minimum [%]
			1	100.0	Measured variable range maximum [%] - Requirement: Minimum > maximum
40788	CNTR1_SET	UINT16		04h	Counter settings counter 1 Bit Description 0-1 Counter source: 0: Counter off 1: Measured variable output 1 (MEAS1) 2: Measured variable output 2 (MEAS2) 3: Reserve 2-3 Counting mode: 0: Reserve 1: Pos. values 2. Neg. values 3: Pos. and neg. values 4-5 Time scaling: 0: s 1: min 2: h 3: Reserve 5-15 Reserve - In counting mode = pos. and neg. values, pulse output is deactivated!

Address	Description	Data type	#	Default	Description
40789 to 40792	Reserved	--		--	Reserved

<sup>1</sup> Max. +/-22 mA or +/-11 V

<sup>2</sup> Automatic correction of parameters in the device.

Each parameter must range within permitted limits. These partly depend on other parameters.

If parameters determining the limits of dependent parameters are changed, (e.g. measuring range is dependent on the type of measurement), the respective parameters are automatically limited to the permitted parameters. The status will show that such a correction has taken place.

## Limitations of configuration parameters

### Options to combine types of measurement

Register: 40523, 40534

The numerous types of measurement can be combined with each other in different ways.

See table 3, page 24

The "earthed" combination is used if both sensors are connected to each other.

### Measuring ranges

Register: 40524, 40535

see table 1, page 4

### Measured variable ranges

Based on linking (register MATRIX), scaling (register SCALE1, 2) and offset (OFFSET1, 2), the largest possible measured variable range is calculated from the measuring ranges (register INPRANGE1, 2). The device does this automatically.

The set measured variable range (register MEASRANGE1, 2), which must be within the calculated measured variable range (zoom function), is then mapped on the analogue output range.

The table values (register TAB1..., TAB2...) refer to the set measured value range.

Abbreviations:

k1: SCALE1 T1a...T1e: INPRANGE1

k2: SCALE2 T2a...T2e: INPRANGE2

MRmin...MRmax: Calculated, largest possible measured variable range

at k1>=0: Min1 = (T<sub>1a</sub> + OFFSET1) × k<sub>1</sub> Max1 = (T<sub>1e</sub> + OFFSET1) × k<sub>1</sub>

at k2>=0: Min2 = (T<sub>2a</sub> + OFFSET2) × k<sub>2</sub> Max2 = (T<sub>2e</sub> + OFFSET2) × k<sub>2</sub>

at k1<0: Min1 = (T<sub>1e</sub> + OFFSET1) × k<sub>1</sub> Max1 = (T<sub>1a</sub> + OFFSET1) × k<sub>1</sub>

at k2<0: Min2 = (T<sub>2e</sub> + OFFSET2) × k<sub>2</sub> Max2 = (T<sub>2a</sub> + OFFSET2) × k<sub>2</sub>

Matrix	Measured variable range			
	Minimum value MRmin	Maximum value MRmax		
Input 1	Min1			Max1
Input 2	Min2			Max2
Input 1 + 2	Min1 + Min2			Max1 + Max2
Input 1 - 2	Min1 - Max2			Max1 - Min2
Input 2 - 1	Min2 - Max1			Max2 - Min1
Input 1 * 2				
	Input 1		Input 2	
	Min1	Max1	Min2	Max2
≥0	>0	≥0	>0	
<0	≤0	≥0	>0	
<0	>0	≥0	>0	
≥0	>0	<0	≤0	
<0	≤0	<0	≤0	
>0	>0	<0	≤0	
≥0	>0	<0	>0	
<0	≤0	<0	>0	
<0	>0	<0	>0	
	Min1 * Min2			Max1 * Max2
	Min1 * Max2			Max1 * Min2
	Max1 * Max2			Max1 * Max2
	Min2 * Max1			Min1 * Max2
	Max1 * Max2			Min1 * Min2
	Min1 * Min2			Min1 * Min2
	Max1 * Min2			Max1 * Max2
	Min1 * Max2			Min1 * Min2
	Min (Min1 * Max2, Min2 * Max1)			Max (Min1 * Min2, Max1 * Max2)
Minimum value (Input 1, 2)	Min (Min1, Min2)			Min (Max1, Max2)
Maximum value (Input 1, 2)	Max (Min1, Min2)			Max (Max1, Max2)
Mean value (Input 1, 2)	(Min1 + Min2)/2			(Max1 + Max2)/2
Sensor backup Input 1	Min1 <sup>1</sup>			Max1 <sup>1</sup>
Sensor backup Input 2	Min2 <sup>1</sup>			Max2 <sup>1</sup>
Sensor backup minimum value (Input 1, 2)	Min1 <sup>1</sup>			Max2 <sup>1</sup>
Sensor backup maximum value (Input 1, 2)	Min1 <sup>1</sup>			Max2 <sup>1</sup>
Sensor backup mean value (Input 1, 2)	Min1 <sup>1</sup>			Max2 <sup>1</sup>

<sup>1</sup> k<sub>1</sub> = k<sub>2</sub>, T<sub>1a</sub> = T<sub>2a</sub>, T<sub>1e</sub> = T<sub>2e</sub>

**Matrix= Absolute value of the measured variable** -> the previously calculated values (MRmin, MRmax) are rescaled once more:

Matrix	Measured variable range		
	Minimum value MRmin	Maximum value MRmax	
Absolute value of the measured variable			
At MRmin, MRmax >= 0	MRmin		MRmax
At MRmin < 0, MRmax >= 0	0		Max( MRmin ,  MRmax )
At MRmin, MRmax < 0	MRmax		MRmin

## Setting time


Register: 40547

The minimum setting time depends on whether both inputs are configured, on the types of measurement, on breakage and short circuit monitoring.

The following minimum setting times result for the input:

Type of measurement	Minimum setting time [ms]	Breakage monitoring	Short circuit monitoring
Voltage [mV]	315	X	-
Current [mA]	160	-	-
Resistance [ $\Omega$ ] 2L	280	X	X
Resistance [ $\Omega$ ] 3L, WF, WF_DIN	595	X	X
Resistance [ $\Omega$ ] 4L	435	X	X
Thermocouple int. comp.	475	X	-

## Linearisation tables

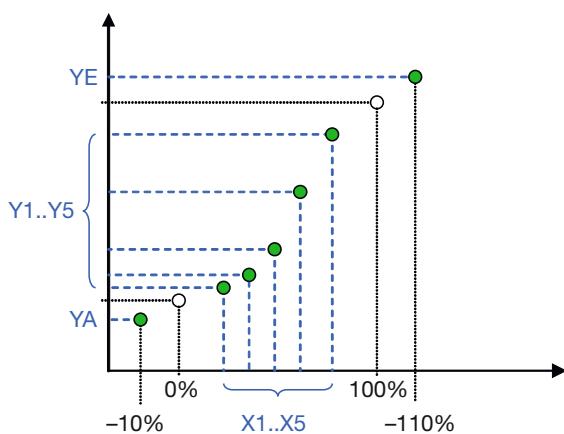

The transmission functions stored in registers OUTSET1 or OUTSET2 constitute information for the PC software to generate the desired transmission function with the table values. This information is irrelevant for the device.

Characteristic curves:

- User-defined, linear, quadratic
- Volume of a horizontal cylinder:

$$y = \frac{1}{\pi} \cdot \left[ \arccos(1 - 2x) - 2 \cdot \sqrt{x - x^2} \cdot (1 - 2x) \right] \quad (h/2r = x = 0..1, \quad y = 0..1)$$

## Meter (CNTR1): Time up to meter overflow

Register: 40400

$$t_{OF} = \frac{CNTR1max}{CNTR1nenn / s}$$

$$CNTR1nenn / s = ZQ\_EW \cdot ZS \cdot 10^{-CNTR\_EXP}$$

$t_{OF}$ : Time up to meter overflow [s]

CNTR1max= 2^32-1

ZQ\_EW: Meter source maximum value

-> see CNTR1\_SET and Chap.  
Measured variable ranges MR-  
max

ZS: Time scaling, -> see CNTR1\_SET: s= 1, min= 1/60; h= 1/3600


CNTR1\_EXP: -> see CNTR1\_EXP

## 7. Electric connections

Circuit	Terminals	Remarks
Measuring input	1 to 8	See Table 2, page 24
Output 1 Output 2	11 (+), 12 (-) 10 (+), 12 (-)	
Relay contact	9, 13	
Power supply	15 (+/-) 16 (-/~/)	Note polarity at DC
Bus-/programmation connection	+, -, GND	Front plug

## Wiring with 2 input sensors

If 2 input sensors or input variables are used, observe combination options in Table 3!

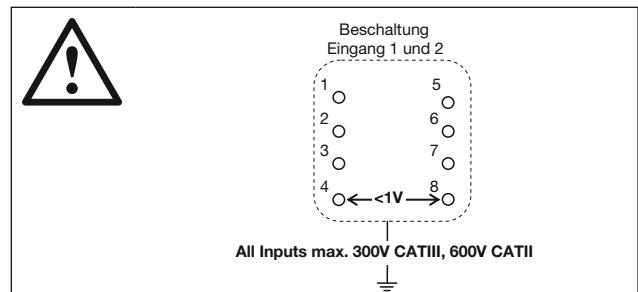

If 2 input sensors or input variables are used, these must be free of potential or galvanically isolated against each other, on principle! Otherwise, the transmitter may be damaged.

Exceptions:

- In case of a permitted input combination<sup>1</sup> with common (and approved) connections on Terminal 4. E.g. direct voltage mV (Terminal 3, 4) & direct voltage V (Terminal 6, 4)
- In case of a permitted input combination<sup>1</sup> with the same reference potential (e.g. earth) on Terminal 4 and 8. E.g. 2 thermocouples (on Terminals 3, 4 or 7, 8) with earthed sensor tips or two mV inputs with a common earth potential on Terminals 4 and 8. In these cases, the specified types of measurement must be configured for earthed sensors.

<sup>1</sup> See Table 3 "Options to combine types of measurement" page 24

**Table 2: Connections of inputs**

Types of measurement	Wiring	
	Input 1	Input 2
Direct voltage mV		
Thermocouple with external cold junction thermostat or internally compensated		
Thermocouple with Pt100 at the terminals at the same input		
Thermocouple with Pt100 at the terminals at the other input		
Resistance thermometer or resistance measurement 2-wire		
Resistance thermometer or resistance measurement 3-wire		
Resistance thermometer or resistance measurement 4-wire		


Types of measurement	Wiring	
	Input 1	Input 2
Resistance teletransmitter WF		
Resistance Teletransmitter WF-DIN		
Direct voltage mA		

**Table 3: Measuring method combination options**


	Input 2 measuring method	U [mV] earthing	TC ext. earthing	TC int. earthing	R 2L	R 3L	RTD 2L	RTD 3L	I [mA]
Input 1 measuring method	Terminals	7,8	7,8	7,8, 2,7,8	2,8	2,7,8	2,8	2,7,8	6,4
U [mV] earthing	3,4	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓
I [mA]	5,4	✓	✓	✓	✓	✓	✓	✓	✓
TC ext. earthing	3,4	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓
TC int. earthing	3,4 1,3,4	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓	✓ ✓
R 2L	1,4	✓	✓	✓	✓	✓	✓	✓	✓
R 3L	1,3,4	✓	✓	✓	✓	✓	✓	✓	✓
R 4L	1,2,3,4	✓	✓						
RTD 2L	1,4	✓	✓	✓	✓	✓	✓	✓	✓
RTD 3L	1,3,4	✓	✓	✓	✓	✓	✓	✓	✓
WF	1,3,4	✓	✓	✓	✓	✓	✓	✓	✓
WF_DIN	1,3,4	✓	✓	✓	✓	✓	✓	✓	✓
RTD 4L	1,2,3,4	✓	✓						

## 8. Dimensional drawing

With screw terminals

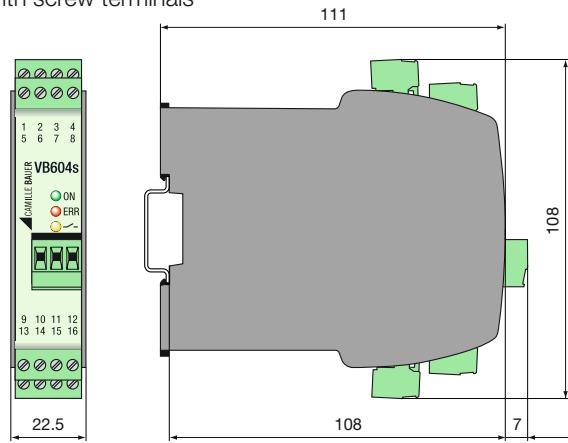

With spring cage terminals

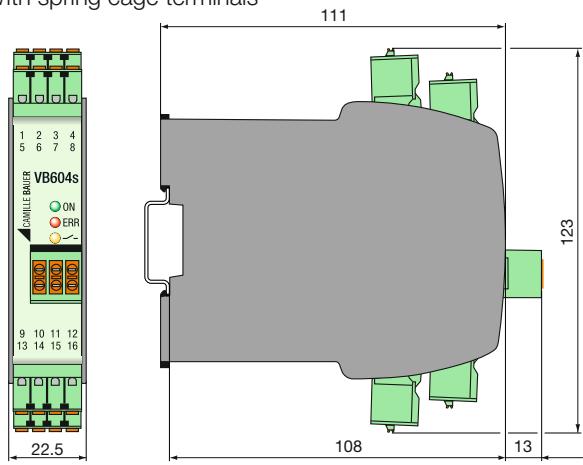

## 10. Conformity declaration



### EG - KONFORMITÄTSERKLÄRUNG EC DECLARATION OF CONFORMITY

CAMILLE BAUER

Dokument-Nr./  
Document.No.:

VB604s\_CE-konf.DOC

Hersteller/  
Manufacturer:

Camille Bauer AG  
Switzerland

Anschrift /  
Address:

Aargauerstrasse 7  
CH-5610 Wohlen

Produktbezeichnung/  
Product name:

Programmierbarer multifunktionaler Messumformer  
Programmable multifunctional transmitter

Typ / Type:

Sineax VB604s

Das bezeichnete Produkt stimmt mit den Vorschriften folgender Europäischer Richtlinien überein, nachgewiesen durch die Einhaltung folgender Normen:

The above mentioned product has been manufactured according to the regulations of the following European directives proven through compliance with the following standards:

Nr. / No.	Richtlinie / Directive
2004/108/EG	Elektromagnetische Verträglichkeit - EMV-Richtlinie
2004/108/EC	Electromagnetic compatibility - EMC directive

EMV / EMC	Fachgrundnorm / Generic Standard	Messverfahren / Measurement methods
Störaussendung / Emission	EN 61000-6-4 : 2007	EN 55011 : 2007+A2:2007
Störfestigkeit / Immunity	EN 61000-6-2 : 2005	IEC 61000-4-2: 1995+A1:1998+A2:2001 IEC 61000-4-3: 2006+A1:2007 IEC 61000-4-4: 2004 IEC 61000-4-5: 2005 IEC 61000-4-6: 2008 IEC 61000-4-11: 2004

Nr. / No.	Richtlinie / Directive
2006/95/EG	Elektrische Betriebsmittel zur Verwendung innerhalb bestimmter Spannungsgrenzen – Niederspannungsrichtlinie – CE-Kennzeichnung : 95
2006/95/EC	Electrical equipment for use within certain voltage limits – Low Voltage Directive – Attachment of CE marking : 95

EN/Norm/Standard	IEC/Norm/Standard
EN 61010-1: 2010	IEC 61010-1: 2010

Ort, Datum /  
Place, date:

Wohlen, 27.November 2012

Unterschrift / signature:

*M. Ulrich*

M. Ulrich  
Leiter Technik / Head of engineering

*J. Brem*

J. Brem  
Qualitätsmanager / Quality manager

## 9. Accessories

USB-RS485 converter

(for SINEAX VB604s programming): Article No. 163 189

**По вопросам продажи и поддержки обращайтесь:**

Архангельск (8182)63-90-72  
Астана (7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89  
Иваново (4932)77-34-06  
Ижевск (3412)26-03-58  
Казань (843)206-01-48

Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81  
Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54


Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

**Единый адрес для всех регионов: cmn@nt-rt.ru || www.camille-bauer.nt-rt.ru**

**PROCESS CONTROL ENGINEERING**



**ANGULAR POSITION ENGINEERING**

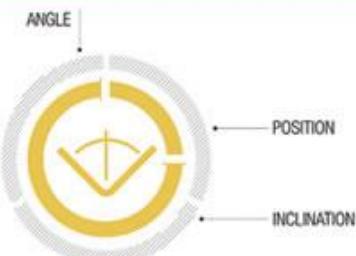

**HEAVY CURRENT ENGINEERING**

