



Преобразователи с контурным питанием SINEAX TI801, TI802

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54

Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: cmn@nt-rt.ru || www.camille-bauer.nt-rt.ru

использовано с разрешения официального
дистрибутора АО «ЮЕ-Интернейшнл»

Allgemeine Eigenschaften

- 4...20 mA Stromeingang.
- Übertragung in ein galvanisch getrenntes 4...20 mA Ausgangssignal.
- Galvanische Trennung Eingang/Ausgang: 1500 V AC.
- Galvanische Trennung Kanal/Kanal: 1500 V AC (nur 2-Kanal-Modell TI802).

Technische Daten

Spannungsversorgung	Über Stromschleife des Eingangs			
Eingang	Strom: 4...20 mA Minimaler Spannungsabfall bei 20 mA: 7 V (alle Lasten bis zu 160 Ω) Maximaler Spannungsabfall bei 20 mA: 3,8 V + (Lastwiderstand) * 0,02 V			
Ausgang	4...20 mA (aktiv), max. Lastwiderstand 500 Ω			
Umgebungsbedingungen	Temperatur: 0...50 °C, Luftfeuchtigkeit min. 30%, max. 90% bei 40 °C nicht kondensierend			
Messfehler des Eingangs	Kalibrierfehler 0,2% des gesamten Bereichs	Temperatur-Koeffizient 0,02% des gesamten Bereichs / °C	Linearisierungsfehler 0,1% des gesamten Bereichs	Effekt der Lastvariation 0,1% des gesamten Bereichs
Antwortzeit	< 100 ms bis Erreichung 90% des Endwertes			
Eingangsschutz	Geschützt bis 35 V DC max.			
Ausgangsschutz	Geschützt bis 35 V DC max.			
Das Instrument entspricht folgenden Standards:	EN 50081-2 (Elektromagnetische Verträglichkeit, industrielle Umgebung) EN 50082-2 (Elektromagnetische Immunität, industrielle Umgebung) EN 61010-1 (Sicherheit)			

Elektrischer Anschluss

Die Verwendung von abgeschirmten Leitungen wird empfohlen. Verwenden Sie ein Referenz-Massepotential. Es ist empfehlenswert, die Signalleitungen nicht in der Nähe von Starkstromleitungen für z.B. Motoren, Transformatoren etc. zu installieren.


Kanal 1, Eingang (TI801 und TI802)

	Passiver Eingang Verbinden Sie den Trennwandler mit der Stromschleife gemäss Bild. Der Trennwandler wird über die 4...20 mA Stromschleife gespeist. Spannungsabfall bei 20 mA: 3,8 V plus Lastabfall (0,02 * Lastwiderstand), Minimum 7 V (z.B. mit einer Last von 250 V ist der Abfall 3,8 V + (0,02 * 250) = 8,80 V)
--	---

Kanal 1, Ausgang (TI801 und TI802)

	Aktiver Ausgang Der Trennwandler generiert einen Strom in der Ausgangsstromschleife identisch zu dem Eingangssignal. Es kann eine maximale Last von 500 Ω angeschlossen werden. Die Ausgangsstromschleife muss NICHT mit Spannung versorgt werden!
--	--

Kanal 2, Eingang (nur TI802)

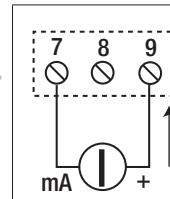


Passiver Eingang

Verbinden Sie den Trennwandler mit der Stromschleife gemäss Bild. Der Trennwandler wird über die 4...20 mA Stromschleife gespeist.

Spannungsabfall bei 20 mA: 3,8 V plus Lastabfall (0,02 * Lastwiderstand), Minimum 7 V (z.B. mit einer Last von 250 V ist der Abfall 3,8 V + (0,02 * 250) = 8,80 V)

Kanal 2, Ausgang (nur TI802)

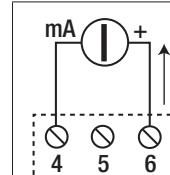


Aktiver Ausgang

Der Trennwandler generiert einen Strom in der Ausgangsstromschleife identisch zu dem Eingangssignal. Es kann eine maximale Last von 500 Ω angeschlossen werden.

Die Ausgangsstromschleife muss NICHT mit Spannung versorgt werden!

Abmessungen

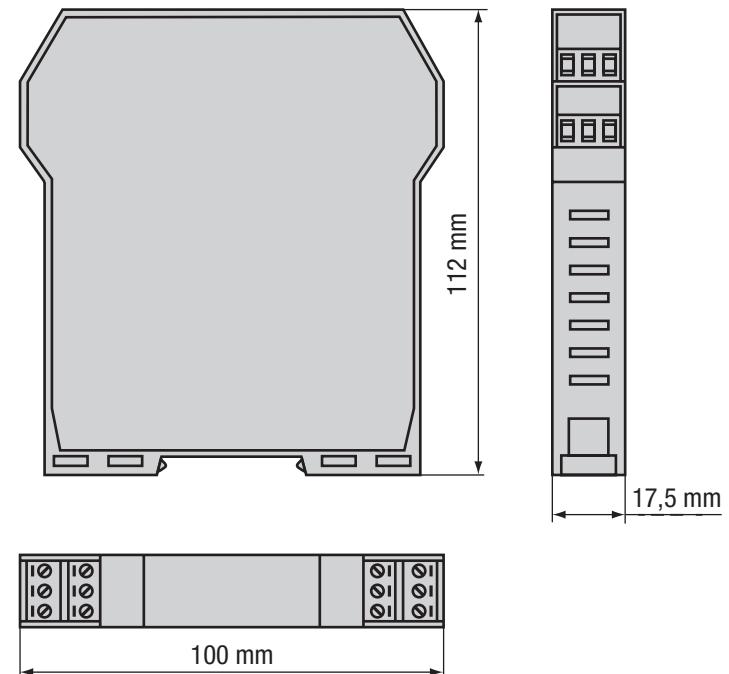

Installationsvorschriften

Das Modul wurde so entwickelt, dass es auf einer DIN 46277 Hutschiene in vertikaler Position befestigt werden kann.



General characteristics

- 4...20 mA current input.
- Retransmission of input as an isolated 4...20 mA output.
- Input/output isolation: 1500 V AC.
- Channel to channel isolation: 1500 V AC (2 channel model TI802 only).

Technical data

Power supply	Self powered from the input (primary) loop		
Input	Current: 4...20 mA Minimum voltage drop at 20 mA: 7 V (all loads up to 160 Ω) Maximum voltage drop at 20 mA: 3.8 V + (load resistance) * 0.02 V		
Output	4...20 mA (active), max. load resistance 500 Ω		
Operating conditions	Temperature: 0...50 °C, humidity min. 30%, max. 90% at 40 °C non condensing		
Input measurement error	Calibration error 0.2% off f.s.	Thermal coefficient 0.02% off f.s. / °C	Linearity error 0.1% off f.s. Load variation effect 0.1% off f.s.
Response time	< 100 ms to reach 90% of final value		
Input protection	Protected up to 35 V DC max.		
Ausgangsschutz	Protected up to 35 V DC max.		
This instrument meets or exceeds the requirement of:	EN 50081-2 (electromagnetic emissions, industrial environment) EN 50082-2 (electromagnetic susceptibility, industrial environment) EN 61010-1 (safety)		

Electrical connections


Screened cable is recommended for signal connections and the screen should be connected to the instrument earth. It is good practice to separate signal cables from power cables and to avoid potential sources of interference such as electric motors, variable speed drives, microwave ovens and induction.

Channel 1, input (TI801 and TI802)

	Passive input Connect the module in the current loop as shown. The module is powered by the 4...20 mA current loop. Voltage drop at 20 mA: 3.8 V plus load voltage drop (0.02 * load resistance), minimum 7 V (e.g. with load of 250 V voltage drop is 3.8 V + (0.02 * 250) = 8.80 V)
--	--


Channel 1, output (TI801 and TI802)

	Active output The module generates a current in the output loop identical to the current in the input loop. It is capable of driving into a maximum load of 500 Ω . The output loop must NOT be powered!
--	---

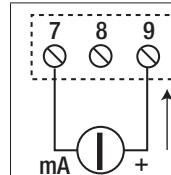Channel 2, input (TI802 only)**Passive input**



Connect the module in the current loop as shown. The module is powered by the 4...20 mA current loop.

Voltage drop at 20 mA: 3.8 V plus load voltage drop (0.02 * load resistance), minimum 7 V (e.g. with load of 250 V voltage drop is: 3.8 V + (0.02 * 250) = 8.80 V)

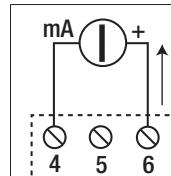Channel 2, output (TI802 only)**Active output**

The module generates a current in the output loop identical to the current in the input loop. It is capable of driving into a maximum load of 500 Ω .

The output loop must NOT be powered!

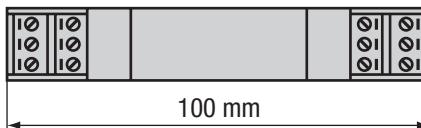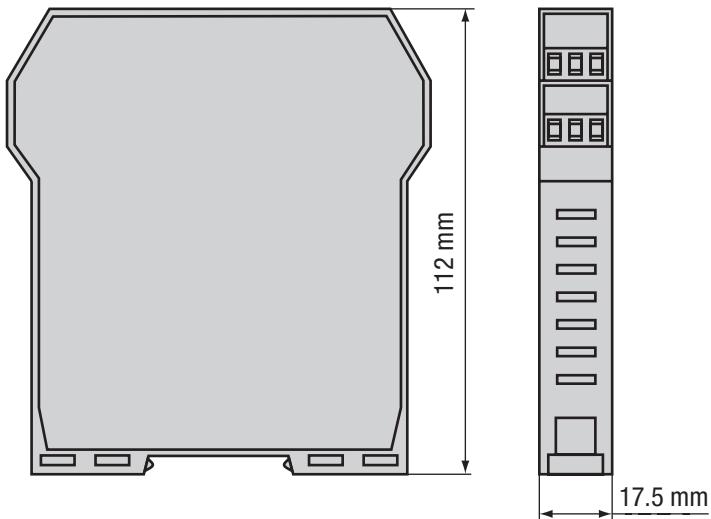Dimensions**Installation instructions**

The module is designed to be mounted on a DIN 46277 bar, in vertical position.



Disposal of Electrical & Electronic Equipment (applicable throughout the European Union and other European countries with separate collection programs).

This symbol, found on your product or on its packaging, indicates that this product should not be treated as household waste when you wish to dispose of it. Instead, it should be handed over to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate disposal of this product. The recycling of materials will help to conserve natural resources. For more detailed information about the recycling of this product, please contact your local city office, waste disposal service or the retail store where you purchased this product.



По вопросам продажи и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54


Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: cmn@nt-rt.ru || www.camille-bauer.nt-rt.ru

PROCESS CONTROL ENGINEERING



ANGULAR POSITION ENGINEERING

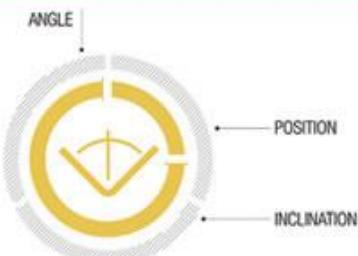

HEAVY CURRENT ENGINEERING

