



**Преобразователь для измерения фазового угла
или коэффициента мощности
SINEAX G536**

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54

Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: cmn@nt-rt.ru || www.camille-bauer.nt-rt.ru

использовано с разрешения официального
дистрибутора АО «ЮЕ-Интернейшнл»

SINEAX G536

Phase Angle or Power Factor Transducer

Carrying rail housing P13/70



Application

The transducer **SINEAX G536** (Fig. 1) measures the phase angle or power factor between current and voltage of a single or 3-phase balanced network having a sine wave form.

The output signal, in the form of a **load independent** DC current or voltage, is proportional to the phase angle resp. power factor between the 2 measured quantities current and voltage.

The transducer fulfills all the important requirements and regulations concerning electromagnetic compatibility **EMV** and **Safety** (IEC 1010 resp. EN 61 010). It was developed and is manufactured and tested in strict accordance with the **quality assurance standard** ISO 9001.



Fig. 1. Transducer SINEAX G536 in housing P13/70
clipped onto a top-hat rail.

Features / Benefits

- Measuring input: Sine, rectangular or distorted wave forms of input quantities with dominant fundamental wave
- Measuring output: Unipolar, bipolar or live zero output variables
- Measuring principle: Measurement of the zero crossing interval
- AC/DC power supply / Universal
- Standard as marine version per Lloyd's Register of Shipping

Technical data

General

- Measured quantity: Phase angle or power factor between current and voltage
- Measuring principle: Measurement of the zero crossing interval

Measuring input →

Examples of measuring ranges with φ -linear output

-180	-120	-90	-60	0	+60	+90	+120	+180 [°el]
inductive (lag)	capacitive (lead)			inductive (lag)	capacitive (lead)			
Generator (outgoing)				Motor (incoming)				Generator (outgoing)
---	---	---	---	---	---	---	---	---
								Meas. range: 30°...120°
								Measuring range: 120°...120°
								Measuring range: -180...180° (clear indication of -170°...170°)

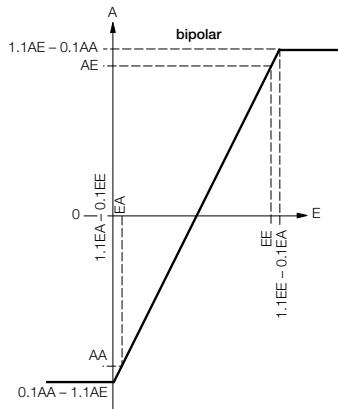
Examples of measuring ranges with $\cos\varphi$ -linear output

-1	-0.5	0	0.5	1	0.5	0	-0.5	-1	[cosφ]
inductive (lag)	capacitive (lead)			inductive (lag)	capacitive (lead)				
Generator (outgoing)				Motor (incoming)				Generator (outgoing)	
---	---	---	---	---	---	---	---	---	
									0.9-cap-1-ind-0.5
									0.8-cap-1-ind-0
									0.5-cap-1-ind-0.5
									-0.5...ind...0...cap...1...ind...0...cap...-0.5

SINEAX G536

Phase Angle or Power Factor Transducer

Nominal frequency f_N :	16 ... 400 Hz
Nominal input voltage U_N :	10 ... 690 V (max. 230 V with power supply from voltage measuring input)
Response sensitivity:	10 ... 120% U_N
Nominal input current I_N :	≥ 0.5 to 6.0 A
Response sensitivity:	< 1% I_N
Own consumption:	< 0.1 VA per current path $U_N \cdot 1.5$ mA per voltage path
Overload capacity:	



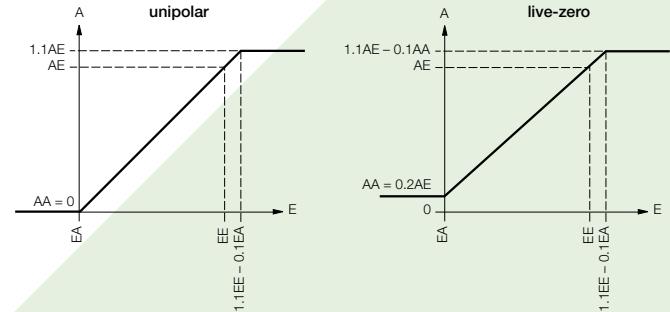
Legend:
 E = Input
 EA = Input start value
 EE = Input end value
 A = Output
 AA = Output start value
 AE = Output end value

¹ But max. 264 V with power supply from voltage measurement

Measuring output

Load-independent DC current:	0 ... 1 to 0 ... 20 mA resp. live-zero 1 ... 5 to 4 ... 20 mA ± 1 to ± 20 mA
Burden voltage:	+ 15 V, resp. - 12 V
Load-independent DC voltage:	0 ... 1 to 0 ... 10 V resp. live-zero 0.2 ... 1 to 2 ... 10 V ± 1 to ± 10 V
Load capacity:	Max. 4 mA
Voltage limit under $R_{ext} = \infty$:	≤ 25 V
Current limit under overload:	Approx. 30 mA
Residual ripple in output current:	< 0.5% p.p.
Nominal value of response time:	4 periods of the nominal frequency
Other ranges:	2, 8 or 16 periods of the nominal frequency

Output characteristic



Accuracy (acc. to EN 60 688)

Reference value:	$\Delta\varphi = 90^\circ$ resp. $\Delta\cos\varphi = 0.5$
Basic accuracy:	Class 0.5

Reference conditions

Ambient temperature	15 ... 30 °C
Input current	0.8 ... 1.2 I_N
Input voltage	0.8 ... 1.2 U_N
Frequency	$f_N \pm 10\%$
Wave forms	Sine wave
Power supply	At nominal range
Output burden	ΔR_{ext} max.

Additional errors (maxima):

Voltage influence between 0.5 and 1.5 U_N	$\pm 0.3\%$
Current influence between 0.4 and 1.5 I_N	$\pm 0.3\%$
between 0.1 and 1.5 I_N	$\pm 0.5\%$

Safety

Protection class:	II (protection isolated, EN 61 010)
Housing protection:	IP 40, housing (test wire, EN 60 529) IP 20, terminals (test finger, EN 60 529)
Contamination level:	2
Oversupply category:	III
Rated insulation voltage (against earth):	230 V resp. 400 V, inputs 230 V, power supply 40 V, output
Test voltage:	50 Hz, 1 min. acc. to EN 61 010-1 3700 resp. 5550 V, inputs versus all other circuits as well as outer surface

Phase Angle or Power Factor Transducer

Test voltage (continuation):	3250 V, input circuits versus each other
	3700 V, power supply versus output as well as outer surface
	490 V, output versus outer surface

Power supply →○

AC/DC power pack (DC or 50/60 Hz)

Table 1: Rated voltages and permissible variations

Rated voltage	Tolerance
85 ... 230 V DC, AC	DC – 15 ... + 33%
24 ... 60 V DC, AC	AC ± 15%

or

Power supply from voltage measuring input: 24...60 V AC or 85...230 V AC

Option: Connect to the low tension to terminals 12 and 13
24 V AC or 24 ... 60 V DC

Power consumption: 3 VA

Installation data

Mechanical design: Housing P13/70

Material of housing: Lexan 940 (polycarbonate), flammability Class V-0 acc. to UL 94, self-extinguishing, non-dripping, free of halogen

Mounting: For rail mounting

Mounting position: Any

Weight: Approx. 0.24 kg

Connecting terminals

Connection element: Screw-type terminals with indirect wire pressure

Permissible cross section of the connection leads: ≤ 4.0 mm² single wire or 2 x 2.5 mm² fine wire

Environmental conditions

Operating temperature: – 10 to + 55 °C

Storage temperature: – 40 to + 70 °C

Relative humidity: ≤ 75%, no dew

Altitude: 2000 m max.

Indoor use statement!

Ambient tests

EN 60 068-2-6: Vibration

Acceleration: ± 2 g

Frequency range: 10 ... 150 ... 10 Hz, rate of frequency sweep: 1 octave/minute

Number of cycles: 10, in each of the three axes

EN 60 068-2-27: Shock

Acceleration: 3 x 50
3 shocks each in 6 directions

EN 60 068-2-1/-2/-3: Cold, dry heat, damp heat

IEC 1000-4-2/-3/-4/-5/-6
EN 55 011: Electromagnetic compatibility

Germanischer Lloyd

Type approval certificate: No. 12 261-98 HH

Ambient category: C

Vibration: 0.7 g

Table 2: Specification and ordering information

Description	*Blocking code	no-go with blocking code	Article No./Feature
SINEAX G536	Order Code 536 - xxxx xxxx xx		536 –
Features, Selection			
1. Mechanical design			
Housing P13/70 for rail mounting			4
2. Measuring mode			
For phase angle (φ-linear)	A		1
For power factor (cosφ-linear)	B		2

SINEAX G536

Phase Angle or Power Factor Transducer

Description	*Blocking code	no-go with blocking code	Article No./Feature
SINEAX G536	Order Code 536 - xxxx xxxx xx		536 -
Features, Selection			
3. Application			
Single-phase AC			1
U: L1 & L2 I: L1	3 or 4-wire 3-phase balanced load		2
U: L2 & L3 I: L2	3 or 4-wire 3-phase balanced load		3
U: L3 & L1 I: L3	3 or 4-wire 3-phase balanced load		4
U: L1 & L3 I: L1	3 or 4-wire 3-phase balanced load		5
U: L2 & L1 I: L2	3 or 4-wire 3-phase balanced load		6
U: L3 & L2 I: L3	3 or 4-wire 3-phase balanced load		7
U: L1 & L2 I: L3	3 or 4-wire 3-phase balanced load		A
U: L2 & L3 I: L1	3 or 4-wire 3-phase balanced load		B
U: L3 & L1 I: L2	3 or 4-wire 3-phase balanced load		C
4. Nominal input frequency			
50 Hz			1
60 Hz			2
Non-standard ≥ 16 to 400 Hz	[Hz]		9
With power supply from measuring input min. 40 Hz			
5. Nominal input voltage			
$U_N = 100 \text{ V}$	C		1
$U_N = 230 \text{ V}$	C		2
$U_N = 400 \text{ V}$	D		3
Non-standard ≥ 10 to 690 V	[V]		
With power supply from measuring input min. 24 V, max. 230 V, see feature 9, lines 3 and 4			9
3-phase system: Input voltage = phase to phase voltage			
6. Nominal input current			
1 A			1
5 A			2
Non-standard ≥ 0.5 to 6.0 A	[A]		9
7. Measuring range			
Phase angle – 60 ... 0 ... + 60 °el			B
$\cos\phi$ 0.5 ... cap ... 1 ... ind ... 0.5			A
Non-standard Measuring range within – 180 ... 0 ... + 180 °el or – 1 ... ind ... 0 ... cap ... 1 ... ind ... 0 ... cap ... – 1, but clear indication only to – 170 ... 0 ... + 170 °el Measuring span ≥ 20 °el	[°el] or [$\cos\phi$]		9
8. Output signal			
0 ... 20 mA			1
4 ... 20 mA			2
Non-standard 0 ... 1.00 to 0 ... < 20, – 1.00 ... 0 ... 1.00 to – 20 ... 0 ... 20 (symmetrical) 1 ... 5 to < (4 ... 20) (AA / AE = 1 / 5)	[mA]		9
0 ... 10 V			A
Non-standard 0 ... 1.00 to 0 ... < 10, – 1.00 ... 0 ... 1.00 to – 10 ... 0 ... 10 (symmetrical) 0.2 ... 1 to 2 ... 10 (AA / AE = 1 / 5)	[V]		Z
AA = Output start value, AE = Output end value			

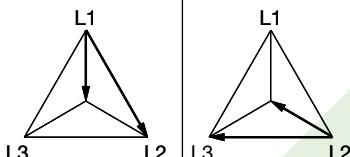
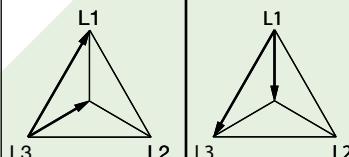
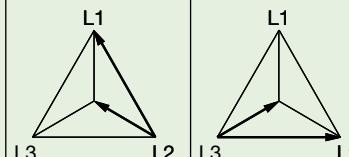
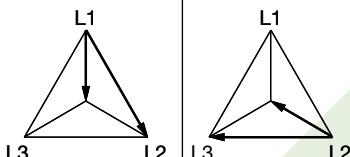
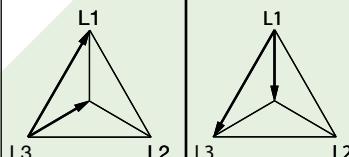
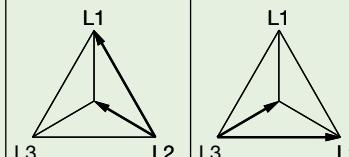
SINEAX G536

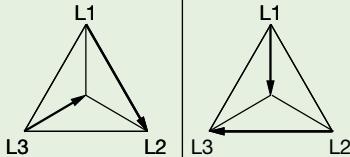
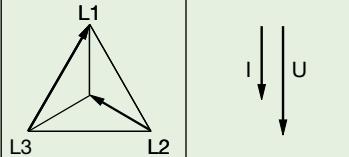

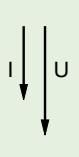
Phase Angle or Power Factor Transducer

Description	*Blocking code	no-go with blocking code	Article No./Feature
SINEAX G536	Order Code 536 - xxxx xxxx xx		536 -
Features, Selection			
9. Power supply			
85 ... 230 V DC, AC			1
24 ... 60 V DC, AC			2
Internal from measuring input (24 ... 60 V AC)		C	3
Internal from measuring input (85 ... 230 V AC)		CD	4
Connect to the low tension 24 V AC / 24 ... 60 V DC			5
10. Response time			
4 periods of the input frequency (standard)			1
2 periods of the input frequency			2
8 periods of the input frequency			3
16 periods of the input frequency			4

* Lines with letter(s) under "no-go" cannot be combined with preceding lines having the same letter under "SCODE".

Application notes

Current connection in phase	L1	L2	L3	L1	L2	L3
Voltage connection between	L1 & L2	L2 & L3	L3 & L1	L1 & L3	L2 & L1	L3 & L2
Vector diagrams						

Current connection in phase	L3	L1	L2	L
Voltage connection between	L1 & L2	L2 & L3	L3 & L1	L & N
Vector diagrams				

SINEAX G536

Phase Angle or Power Factor Transducer

Electrical connections

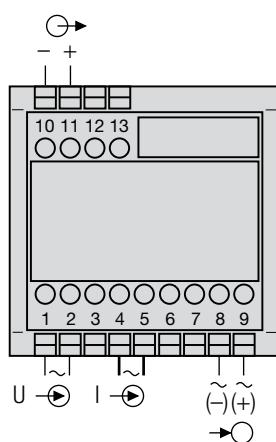


Fig. 2. Power supply connected to terminals 8 and 9.

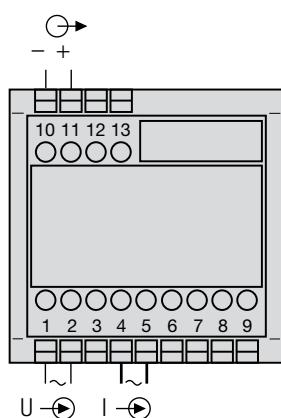


Fig. 3. Power supply internal from measuring input, without separated power supply.

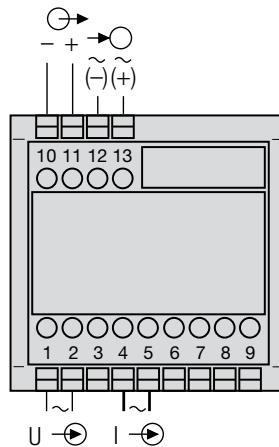
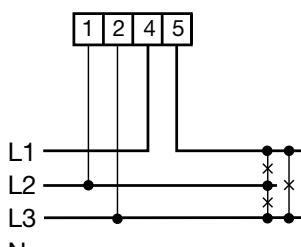
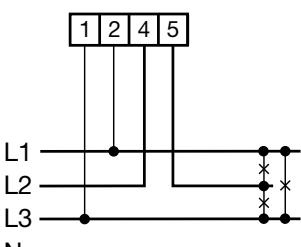


Fig. 4. Power supply connected to the low tension terminal side 12 and 13.

- = Measuring input
- = Measuring output
- = Power supply

Measuring inputs			
Application	Terminal allocation	Application	Terminal allocation
Phase angle or power factor measurement in single-phase AC network		Phase angle or power factor measurement in 3 or 4-wire 3-phase network U: L1 & L2 I: L1	
Phase angle or power factor measurement in 3 or 4-wire 3-phase network U: L2 & L3 I: L2		Phase angle or power factor measurement in 3 or 4-wire 3-phase network U: L3 & L1 I: L3	
Phase angle or power factor measurement in 3 or 4-wire 3-phase network U: L1 & L3 I: L1		Phase angle or power factor measurement in 3 or 4-wire 3-phase network U: L2 & L1 I: L2	
Phase angle or power factor measurement in 3 or 4-wire 3-phase network U: L3 & L2 I: L3		Phase angle or power factor measurement in 3 or 4-wire 3-phase network U: L1 & L2 I: L3	

Phase Angle or Power Factor Transducer

Measuring inputs			
Application	Terminal allocation	Application	Terminal allocation
<p>Phase angle or power factor measurement in 3 or 4-wire 3-phase network U: L2 & L3 I: L1</p> 		<p>Phase angle or power factor measurement in 3 or 4-wire 3-phase network U: L3 & L1 I: L2</p> 	

Dimensional drawing

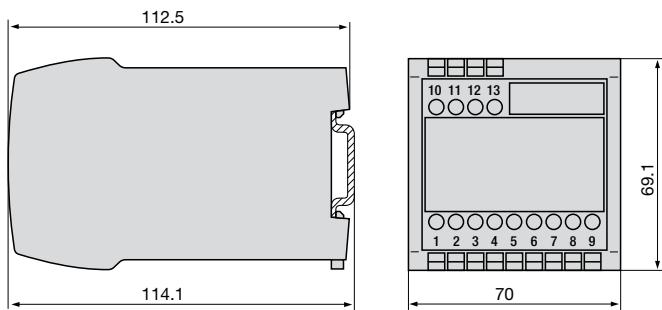


Fig. 5. Housing P13/70 clipped onto a top-hat rail (35 x 15 or 35 x 7.5 mm, acc. to EN 50 022).

Standard accessories

1 Operating instructions in three languages: German, French, English

По вопросам продажи и поддержки обращайтесь:

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Казань (843)206-01-48

Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81

Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54

Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Единый адрес для всех регионов: cmn@nt-rt.ru || www.camille-bauer.nt-rt.ru

PROCESS CONTROL ENGINEERING



ANGULAR POSITION ENGINEERING



HEAVY CURRENT ENGINEERING

